

***i700plus* User's Guide**

Nextel/Motorola

September 9, 1999

i700plus Features Bookmark

You can use this fold-out diagram as a bookmark, making it easy to refer to while you learn to use your i700plus phone.



*Applies to Nextel Online Internet Services: Future availability

Learning to Use Your i700plus

1	Tear off the Quick Reference Card located on the back cover, complete the information and keep it handy.
2	Read Safety and General Information.
3	Familiarize yourself with the Table of Contents.
4	Read Getting Started, which includes a Quick Guide to i700plus Functions.
5	View the i700plus Video included in the box.

NOTE: Remove the plastic film lens protector from the display.

NOTE: The display backlight is activated by pressing any key or button.

Table of Contents

Introduction	v
Welcome to Nextel®	v
Questions?	vi
Nextel Business Solutions.....	vii
Getting Started	9
About This Section	9
Batteries	9
Attaching the Battery	10
Detaching the Battery	10
Charging the Battery	10
Turning Your <i>i700plus</i> On/Off	11
Activating Your <i>i700plus</i>	12
Your Nextel Phone Status	12
Display Icons.....	13
Modes and Menus.....	14
Quick Guide to <i>i700plus</i> Functions	15
Phone Mode	15
Private Mode	16
Group Mode	16
Creating, Editing and Using Stored Lists	17
About This Section	17
Storing Names and Numbers	17
Editing Stored List Entries	19
Edit a Phone Number or Associated Name or Speed Dial Number	19
Edit a Private ID or Associated Name	19
Erasing List Entries	20
Phone Mode	21
Phone Calls	21
About This Section	21
Programming Your Own Phone Number	21
Displaying Your Phone Number	22
Making Phone Calls	22
Making Calls From the Stored List.....	22
Emergency/Non-Emergency Dial.....	23
Receiving/Ending a Phone Call	24

Missed Call Indicator	24
Last 10 Numbers Received/Sent Calls List	25
Quickstore of Phone Numbers	25
Nextel Voice Mail Service.....	26
About This Section	26
Voice Mail Features: Basic	26
Setting Up Your Voice Mailbox.....	26
New Message Indicators	27
About Voice Mail Menus	28
Logging Into Voice Mail.....	28
Listening Options	29
Listening Options (Quick Reference List)	30
Saving/Deleting Messages	31
Choosing Order to Play Unheard Messages.....	31
Customizing Your Voice Mail Setup	32
Changing Your Password	32
Recording Your Name	32
Recording Your Active Greeting	33
Automatic Playback.....	34
Voice Mail Features: Advanced	34
Recording and Sending A Message	34
Special Delivery Options	35
Greetings Schedule.....	36
Working With Group Lists	38
Message Forwarding	39
Time and Date Charts	41
Pager Notification.....	41
Additional Phone Services	43
About This Section	43
Call Waiting	43
Call Hold	44
Three-Way Calling	45
Call Forwarding	45
Transferring Calls to Voice Mail	46
Caller ID	46
Alternate Line Service	47
Text and Numeric Paging	49
About This Section	49
Text and Numeric Paging Features	49
Notification of New Pages	50
Accessing New Pages	50
Sending a Page	51
Numeric Paging.....	51

Table of Contents

Operator Assisted Paging.....	51
Web Paging.....	51
E-Mail Paging.....	52
Using Your Phone As A Modem.....	53
Private/Group Mode	54
Nextel Direct Connect®	54
About This Section	54
Programming Your Own Private ID	55
Displaying Your Private ID.....	55
Using the Private/Group Speaker	55
Placing Private Calls	55
Receiving Private Calls	57
Quickstore of Private IDs	57
Sending a Call Alert	57
Receiving/Responding to a Call Alert	57
Call Alert Queuing	58
Group Calls	58
Group-Silent Programming	60
Customizing the i700plus	61
About This Section	61
Changing the Display Language.....	61
Setting the Time and Date.....	61
Setting the Ringer Volume	63
Selecting a Ring Style	63
Setting VibraCall™	64
Programming Menus.....	65
Programming Menus Shortcut and Options	66
Ordering Information.....	70
Accessories.....	71
Other Important Information	82
Nextel Customer Care.....	82
Understanding Status Messages.....	82
Nextel Terms and Conditions of Service.....	84
Safety and General Information.....	87
Accessory Safety Information.....	91
Warranty Information	92
Patent and Trademark Information.....	98
Index	xcix

£700 plus

www.nextel.com

Introduction

Welcome to Nextel®

Thank you for choosing Nextel as your wireless communications provider. The *i700plus* is one of the most sophisticated digital cellular phones available today, offering you a range of unique, state-of-the-art features. Before you get started, please refer to the "*i700plus* Features Bookmark", attached to the front cover of this guide, which you can use as a placeholder. It has a picture of the *i700plus* with all of the components clearly labeled. Also, the back of this guide includes a topic Index to help you look up specific information throughout the guide.

This guide contains all the information you need to take full advantage of your Nextel service and *i700plus*, including:

Digital Cellular Calling -- Nextel's All-Digital network lets you enjoy a crystal-clear connection, with built-in call security, every time you place a phone call. Find out more about placing calls in this section.	Page 21
Nextel Direct Connect® -- An innovative feature for communicating instantly with one or more co-workers at a fraction of the cost of cellular. Read more about Nextel Direct Connect in this section.	Page 54
Text and Numeric Paging -- Lets you receive numeric pages and important, short messages right over the phone. Learn more about Paging in this section.	Page 49
Voice Mail -- Takes messages 24-hours a day and includes other features such as Schedule a Page, which you can use to remind yourself about upcoming appointments and dates up to six months away. Read more about Voice Mail in this section.	Page 26
Additional Phone Services -- Includes Call Forwarding and Call Waiting. As well as Alternate Line Service and Three-Way Calling, which lets you conduct conference calls whether you're in the office or out on travel. Find out more in this section.	Page 43
Nextel Online -- Dial-up Service capability without Landline Access (see the Nextel Online Dial-up Service User's Guide) as well as Net Mode to access Nextel Online Internet Services (future availability).	

Programming -- At Nextel, we know one size doesn't fit all--and this feature proves it! You can customize your <i>i700plus</i> and make it behave the way you want it to. Learn how in this section.	Page 61
Quick Guide to <i>i700plus</i> Functions -- Enables experienced cellular phone and two-way radio users to get started right away!	Page 15
Other Nextel Advantages - In addition to all of the previously mentioned benefits, there's more... Nextel features also include the following: <ul style="list-style-type: none">• The all-digital Nextel National Network• No roaming fees• One-second call rounding after the first minute• Flat-rate long distance pricing anywhere in the continental U.S.• No landline connection charges	

NOTE: Turn to the Getting Started section beginning on Page 9. For experienced digital phone and two-way radio users, this section might be all you need to get started.

For more information about Nextel or to view this guide on our web site, visit us at www.nextel.com.

Questions?

Call Nextel Customer Care at 1-800-639-6111, or dial 611 from your *i700plus*.

Nextel Business Solutions

The *i700plus* and Nextel's All-Digital National Network join forces to provide the only office small enough to fit in your pocket. Below is a list of Nextel's all new innovative features developed for business people on the go!

Ever wish you could take your assistant with you? The i700plus has the right business solutions for you.

Personalized 24-hour Voice Mail, which takes messages when you're not available and a whole lot more. (For details see "Nextel Voice Mail Service" on page 26.) And, Schedule a Page, which can help you remember those important dates. (See "Web Paging" on page 51.)

Ever head for a meeting and forget the address of the company to which you were headed?

Have your assistant send a text page to your *i700plus*. That's right, you can receive text and numeric pages right to your *i700plus*. (For details see "Text and Numeric Paging" on page 49.)

Need to remind everyone on the committee you chair about an upcoming meeting?

Create a Group List for any committee, project task force, etc. Then, create a voice message and send it to everyone in the group! It's just that simple with the *i700plus*. (For details see "Using Group Lists" on page 35.)

Responsible for keeping in touch with building maintenance workers or project team members?

You can use your *i700plus* as a two-way radio for a fraction of the cost of cellular calls. (For details see "Nextel Direct Connect®" on page 54.)

Holding conference calls has never been easier. Your i700plus includes 3-way calling.

With 3-way calling, you can conduct a conference call with clients or co-workers whether you're in the office or on the go! (For details see "Three-Way Calling" on page 45.)

Need to monitor phone call length for charging purposes?

You can with the *i700plus*, just turn on the Display Timer and the duration of the most recent phone call will display. (For details see "Display Timer:On/Off" on page 66.)

£700 plus

www.nextel.com

Getting Started

In this section you will learn everything you need to know to begin using your *i700plus*. This section also includes a Quick Guide portion so experienced digital phone and two-way radio users can get started right away.

About This Section

This section includes instructions for the following tasks:

 
Batteries: Attaching, Detaching, and Charging	Page 10
Turning Your <i>i700plus</i> On/Off	Page 11
Activating Your <i>i700plus</i>	Page 12
NOTE: Your phone must be activated before you can use it.	
Your Nextel Phone Status	Page 12
Display Icons	Page 13
Modes and Menus	Page 14
Quick Guide to Using <i>i700plus</i> Functions	Page 15

Batteries

Your *i700plus* comes with a standard NiMH-AA 1100mAh battery. After attaching the battery, charge it for at least ten hours before you use it for the first time. After the initial charging, the battery can be charged more quickly.

Attaching the Battery


- 1 Remove the battery cover located on the back of the phone. To do so, release the lock at the bottom of the battery cover by pressing up on the latch.

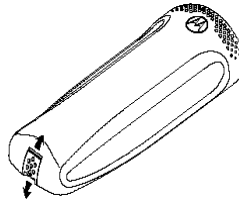

- 2 Remove the cover by sliding it away from the antenna.
- 3 Insert the battery with the “+” and “-” at the top. Install the battery bottom first, then press down on the battery to secure it.
- 4 Replace the battery cover and lock by pressing down on the latch.

Detaching the Battery

 - 1 Release the battery cover by pressing the battery cover latch upward.

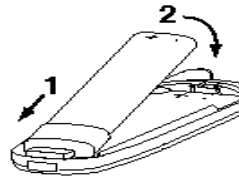

- 2 Remove the cover by sliding it away from the antenna and lift the battery out of the phone.

Charging the Battery

Your *i700plus* comes with the Standard Travel Charger. You can charge your battery with the phone on or off.

To charge your *i700plus* using the Standard Travel Charger:

- 1 Attach the charger to your phone’s Side Charging Jack. (See Features Bookmark on inside cover for jack location.)
- 2 Plug the charger into an electrical outlet.

Battery Charging Status



The battery strength indicator icon, found on your phone's display screen, shows the charge amount remaining in the battery.

	Icon Flashes	Icon Displays	Icon Displays	Icon Displays	Icon Displays
Charge Strength	Low Battery	0-30%	31-60%	61-90%	91-100% Fully Charged


A short, chirp-like sound indicates a low battery. The icon flashes when you have 5 minutes of talk time remaining.

Turning Your *i700plus* On/Off

Phone On

1	Extend the antenna.
2	<p>Press and hold .</p> <p>As your phone connects to the Nextel National Network, you will see a "Welcome to Nextel" message and a connecting message. When Phone Ready appears on the display, you are ready to use your <i>i700plus</i>!</p> 

Phone Off

1	Press and hold  until you see the message Powering Off .
2	Push in the antenna.

Activating Your *i700plus*

Before using your *i700plus*, it must be activated.

- **If you purchased your phone through a Nextel Sales Representative:**
Your phone should be active already.
- **If you purchased your phone through an authorized dealer other than Nextel:** Follow the step-by step instructions on the enclosed activation sheet to activate your Nextel service.

If your display reads **No Service** or doesn't change to the **Phone Ready** screen--when you turn on your phone--and you know you are in a Nextel coverage area, call Nextel Customer Care at 1-800-639-6111. (For details on Nextel coverage areas, visit Nextel at www.nextel.com and select "Digital Coverage". Then select "Click for Nextel Coverage Map".)

NOTE: To register for the first time on the Nextel network, you must turn on your *i700plus* in your local calling area.





 

 



Your Nextel Phone Status

Your *i700plus* has a "Status Light" indicator. The "Status Light" shows you, at a glance, the status of your connection (see Features Bookmark on inside cover).


Status Light Indicator	Nextel Phone Status
Flashing Red	Signing on to the network -- Please Wait.
Solid Red	No service or out of coverage area. If you are in a coverage area, keep your phone on and it will attempt to connect every two minutes. If you cannot connect after 15 minutes or more, call Nextel Customer Care at 1-800-639-6111.
Flashing Green	In service/Ready to use. NOTE: Nextel Direct Connect calls are not available outside of your home market area.
Solid Green	In use.





Display Icons

 After you turn on your phone, the following icons may appear on the display:



	Signal Strength Indicator: Shows the signal strength. Six bars indicate the strongest signal. Calls and messages cannot be sent or received when there is no signal.
	Battery Strength Indicator: Shows the remaining charge in your battery.
	Voice Mail Indicator: Indicates that you have messages in your voice mailbox. A flashing voice mail icon indicates that you have new, unheard messages.
	New Text and Numeric Paging Flashing Indicator: Indicates that you have new incoming pages.
	Unread Text and Numeric Paging Indicator: Indicates that you have unread but saved pages.
	VibraCall™ Indicator: Indicates that the Vibrate All option is turned on. Your <i>i700plus</i> will vibrate instead of emitting ring tones.
	Active Line Indicator: Indicates the active phone line (1 or 2).
	Call Forward Indicator: Indicates that incoming phone calls have been forwarded for a specified line (1, 2, or both).
	Private/Group Speaker Indicator: Indicates that the Private/Group speaker is off. You will hear Nextel Direct Connect calls through the earpiece.
	More Information Indicator: Indicates that there is more text to read above and/or below the current screen.

Modes and Menus

When you first turn on your phone, the display defaults to **Phone** mode. However, your *i700plus* operates in four different modes. To switch between modes, press . The table below provides more details about the four modes:

Mode	What the Display Looks Like	Function
Phone Mode		To make cellular phone calls.
Private Mode		To make private two-way radio calls using Nextel Direct Connect.
Group Mode		To make group two-way radio calls using Nextel Direct Connect.
Net Mode		To access Nextel Online Internet Services (future availability).

If the word **Ready** does not appear after the mode name in the display, that mode is either unavailable or it has not been activated. Once a mode is activated, there are various menu options (within each mode) that allow you to access different functions. To switch between menu options follow the steps below:

- 1 Press .
- 2 Press  under the displayed menu option that you want to select.

Quick Guide to *i700plus* Functions

Now that you understand different modes, here's a quick way to get started using them. This Quick Guide highlights some of the most commonly used functions in **Phone**, **Private**, and **Group** modes. These functions are described in more detail in later sections.

Phone Mode

You must be in **Phone** mode to perform the following functions:



Function	Action
Programming Your Own Phone Number	<ol style="list-style-type: none"> 1 Press then then then under "Ok". After you program your phone number, this option will read "Edit". 2 Enter your phone number and press under "Store" then under "Exit".
Displaying Your Phone Number	Press then then .
Making a Phone Call	Enter the phone number and press .
Ending a Phone Call	Press .
Last Number Redial	Press .
Emergency Dial	Press and hold for two seconds.
Receiving a Phone Call	Press , , , or any key 0 - 9.

Private Mode

You must be in **Private mode** to perform private two-way radio functions. Press **Mode** to switch from Phone to **Private** mode.



Function	Action
Sending a Prvt Call	<p>From the Prvt Ready mode, your most recently used Nextel Direct Connect call displays. To scroll other names, press . Select the name of the individual you would like to call or enter the Private ID number.</p> <p>To place the call, press and hold the Nextel Direct Connect Push-To-Talk button. Wait for the chirp, then speak into the microphone.</p> <p>To listen, release the Nextel Direct Connect Push-To-Talk button.</p>

Group Mode

You must be in **Group mode** to perform group two-way radio functions. Press **Mode** to switch from **Private** to **Group** mode.



Function	Action
Sending a Group Call	<p>From the Group Ready mode, your most recently used talkgroup displays. To scroll other talkgroups, press .</p> <p>To place a call to a talkgroup, press and hold the Nextel Direct Connect Push-To-Talk button. Wait for the chirp, then speak into the microphone.</p> <p>To listen, release the Nextel Direct Connect Push-To-Talk button.</p>

Creating, Editing and Using Stored Lists

A stored list is made up of names, phone numbers, private IDs and speed dial numbers. Stored lists are convenient because you do not need to remember names and numbers. Instead, you simply scroll through your stored list, press a button and the number is dialed for you.

NOTE: If you want to use your computer to create stored lists for your *i700plus*, use Nextel's iDEN Organizer. It's available for programming names, phone numbers, and Private IDs into your phone. To order, call Nextel Nextday SM Accessories at 1-800-914-3240 or contact your Nextel Authorized Representative.

About This Section

This section includes instructions for the following tasks:

Storing Names and Numbers	Page 17
Editing Stored List Entries	Page 19

Storing Names and Numbers

This programming function allows you to store up to 100 names, phone numbers and private ID numbers. Your *i700plus* will automatically assign the next available speed dial number, which you can change. Once you have stored an individual, you can call them by scrolling through the list and finding their name, using the speed dial number or using Nextel Direct Connect (see "Nextel Direct Connect®" on page 54). And, whenever the person calls you, your phone will display their name if you entered their 10-digit phone number. The display holds 12 phone-number characters. If the phone number exceeds 12 characters, you can press ● under "More" to see the remaining characters. To return to the start of the number, press ● under "Numbr".

You can store up to 100 names, phone numbers and private IDs using the following steps:

1	Press *← then #↵ then 2-abc then 0_{next} .
2	The message: 20=Phone / Prvt List displays. Press ⓪ under "Ok". Another message will display with the remaining number of slots available. The phone will then display the Enter Name screen.
3	Enter the name of the individual you want to store. (Notice, each key has a number and several letters. To select different letters on a key, quickly press the key until the desired letter displays. For example, to enter the letter Y you must press the 9↵ key 3 times quickly. Also, you can press and hold #↵ to change the case of the letter you just entered (lower to upper and upper to lower case). The default style is upper case.) After you have entered the name, press ⓪ under "Store".
4	Enter Phone Number displays. Enter person's area code and phone number and press ⓪ under "Store".
5	The name and Spd# = displays. The system automatically assigns a speed dial number, which you can change by entering a new number. Press ⓪ under "Store".
6	Enter PrvtID displays. Enter the person's Direct Connect private ID. Press ⓪ under "Store".
7	Repeat steps 2 through 6 to add additional names/numbers.
8	Press ⓪ under "Exit" when you have finished.

NOTE: To see the name with Caller ID, enter the caller's 10-digit regular phone number (703-555-9999) or their 11-digit Nextel number (1-703-555-9999) in your phone list (see "Caller ID" on page 46).

Editing Stored List Entries

Once you have created lists, you can edit them as necessary. Select the applicable option below to edit a portion of a list.

Edit a Phone Number or Associated Name or Speed Dial Number

1	Press then then then .
2	At the Phone List Edit screen, press under “Ok”.
3	At the Edit Entry? screen, press under “Ok”.
4	Press until the desired entry appears.
5	Press under “Ok”.
6	Edit the desired information (Number, Name, Speed Dial Number) and press under “Store”. If you do not wish to edit one or more of the components, just press under "Store".
7	Press under “Exit” until you see the Phone Ready screen.

Edit a Private ID or Associated Name

1	Press then then then .
2	At the Prvt ID List Edit screen, press under “Ok”.
3	At the Edit Entry? screen, press under “Ok”.
4	Press until the desired entry appears, press under “Ok”.
5	Edit the desired information (Private ID, Name) and press under “Store”. If you do not wish to edit one or more of the components, just press under "Store".
6	Press under “Exit” until you see the Phone Ready screen.

Erasing List Entries

Erasing stored list entries is as easy as creating them. To erase an entry item, follow the steps below:


1	Press then then then to erase a Phone Number entry or to erase a Private ID entry.
2	At the Phone (or Prvt ID) List Edit screen, press under “Ok”.
3	Press at the Edit Entry? screen until you see Erase Entry?
4	Press under “Ok”.
5	Press until the desired entry appears.
6	Press under “Ok”.
7	Press under “Yes” at the Erase? screen.
8	Press under “Exit” until you see the Phone Ready screen.

Phone Mode

Phone Calls

In addition to making and receiving phone calls in **Phone** mode, you can make emergency calls, be notified of a missed call, select ring style notifications, and more. To learn how to perform these functions review the following section.



NOTE: For most Phone functions, you will need to be in Phone Mode. Press  until you see *Phone Ready*. For more information, see “Modes and Menus” on page 14.


 
 
 
 

About This Section

This section includes the following:

Programming Your Own Phone Number	Page 21
Making Phone Calls	Page 22
Receiving/Ending a Phone Call	Page 24
Missed Call Indicator	Page 24
Last 10 Numbers Received/Sent Calls List	Page 25
Quickstore of Phone Numbers	Page 25




Programming Your Own Phone Number

For later reference, you may want to store your own phone number. To do so, follow the steps below:

- 1 Press  then  then  then  under “Ok”. (After phone number is programmed, option will read “Edit”.)
- 2 Enter your phone number.
- 3 Press  under “Store”.
- 4 Press  under “Exit”.

NOTE: Your phone number is automatically entered with the first incoming call.



Displaying Your Phone Number

Press  then  then .




Making Phone Calls

There are five ways to make a phone call: Direct Dial, Scroll, Name Search, Speed Dial, and Turbo Dial™.

Direct Dial

- | | |
|---|--|
| 1 | From Phone Ready , enter the number using the keypad. |
| 2 | Press  to place the call. |
| 3 | Press  to end the call. |



If you make a mistake:

To Clear One Digit	To Clear All Digits	To Cancel
Press 	Press and hold 	Press  under "Cancel"




Making Calls From the Stored List

Before you can use the Scroll, Name Search, Speed Dial or Turbo Dial methods, you first must create a phone list. To learn how to create stored lists, see Page 17.




Scroll

- | | |
|---|--|
| 1 | Press  to select the individual you want to call. |
| 2 | Press  . |

Name Search

- | | |
|---|--|
| 1 | Press  under “Name”. |
| 2 | Using the keypad, enter the first letter of the desired name. |
| 3 | Press  to scroll names. |
| 4 | Press  . |


Speed Dial


- | | |
|---|--|
| 1 | Press  until you see the “Spd#” option. |
| 2 | Press  under “Spd#”. |
| 3 | Enter the speed-dial number. |
| 4 | Press  . |

Turbo Dial

Allows you to call any one of your first eight phone list entries by pressing and holding the corresponding numeric key (1-8).

Automatic Redial


Press  to redial the last number you called.

NOTE: If you receive “System Busy, Try Later”, press  to redial the number automatically. You will hear a ring-back tone when the call is successful.

Emergency/Non-Emergency Dial




The Emergency Dial feature allows you to call 911 emergency by pressing a single button, even if the keypad is locked. If you are on an active call, you must end it before pressing the emergency key.

Your phone is already programmed with the Non-Emergency number provided by your local State Police and Highway Patrol. You can use this feature to report traffic accidents, motorist problems, careless drivers or any other non-emergency highway incident.

Emergency:	Non-Emergency:
Press and hold  until the phone displays "EMERGENCY".	Check www.nextel.com for an up-to-date list of current numbers.

NOTE: Access to 911 may not be available in all areas. Contact Customer Care at 1-800-639-6111 for details. Also, accessibility of non-emergency dialing service within each state is subject to availability along major highways.

Receiving/Ending a Phone Call

An incoming call is indicated by a ring or vibration or backlight illumination. You can answer the call by pressing any numeric key (0-9), or by pressing , , or .

Ending a Call


 

Press  to hang up.

Missed Call Indicator

Your *i700plus* notifies you of unanswered phone calls. If you subscribe to Caller ID, your *i700plus* temporarily stores the caller's phone number in your Last 10 Received Calls list. Your screen displays a flashing message with the number of missed calls. Press any key to clear the flashing indicator.



Retrieving Missed Calls

- 1 Press  until you see the "Calls" option.
- 2 Press  under "Calls".
- 3 Press  to scroll the list.

Last 10 Numbers Received/Sent Calls List

If you subscribe to Caller ID, you can view, dial, and store the last ten received and last ten sent telephone numbers. The most recently received or sent calls appear first in your call list. If the name is not stored, the phone number displays.

Quickstore of Phone Numbers

Quickstore allows you to quickly store a received or sent phone number without going through the Programming menu.



Reviewing/Storing Received Calls

1	Press MENU until you see the “Calls” option.
2	Press ● under “Calls”. The Rcvd Calls screen appears.
3	Press ◀▶ to scroll entries. Press ● under “Store” to store the number in the first available storage space.
4	Enter the name using the keypad. (Notice, each key has a number and several letters. To select different letters on a key, quickly press the key until the desired letter displays. For example, to enter the letter Y you must press the 9YZ key 3 times quickly.)
5	Press ● under “Store” after you have entered the name.
6	Press ● under “Cancl” to close the Rcvd Calls screen.

Reviewing/Storing Sent Calls

1	Press MENU until you see the “Calls” option.
2	Press ● under “Calls”.
3	Press MENU until you see the “Sent” if this option isn’t already visible.
4	Press ● under “Sent”.
5	Press ◀▶ to scroll entries. (To store an entry from the Sent list, press ● under “Store” and follow steps 4-6 above).

Nextel Voice Mail Service

Welcome to Nextel's Voice Mail Service, a flexible, easy-to-use system that takes messages when you're not available--so you never miss an important call!

About This Section

The main topics covered in this section are listed below:

Voice Mail Features: Basic	Page 26
Setting Up Your Voice Mailbox	Page 26
New Message Indicators	Page 27
About Voice Mail Menus	Page 28
Logging Into Voice Mail	Page 28
Listening Options (Quick Reference List)	Page 30
Saving and Deleting Messages	Page 31
Choosing Order to Play Unheard Messages	Page 31
Customizing Your Voice Mail Setup	Page 32
Voice Mail Features: Advanced	Page 34

Voice Mail Features: Basic

This section covers the most commonly used voice mail features. Once you log into voice mail, there are a number of innovative features you can access. They are also covered in this chapter. Also, after you access Voice Mail, an automated system tells you each menu option and which button to press to make a menu selection.

Setting Up Your Voice Mailbox

You must set up your voice mailbox before you can retrieve messages. The steps below will tell you how to setup your mailbox. However, before proceeding you may want to read "Recording Your Active Greeting" on page 33, which provides information you may want to include in your greeting:


Nextel Voice Mail Service


1	Using your Nextel phone, dial your 10-digit Nextel Personal Telephone Number (PTN). If you are calling from a phone other than your Nextel <i>i700plus</i> , you will hear a greeting. Press *4 to access your voice mail account.
2	When prompted, enter your password. (New users should enter the last seven digits of your phone number. This is your temporary password).
3	Follow the tutorial to: <ul style="list-style-type: none">• Create a new four- to seven-digit password (see “Changing Your Password” on page 32).• Record your name (see “Recording Your Name” on page 32).• Record a greeting (see “Recording Your Active Greeting” on page 33).
4	When the system says, “Enjoy using Nextel voice mail,” your mailbox is set up.

New Message Indicators

When you receive a new message, the following will occur:

 - **New Voice Mail Waiting** will display on the screen once your phone is turned on (if your phone is off when the call is received).

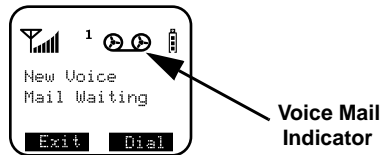

- The  icon will flash at the top of the display.
- Your *i700plus* will alert you every 30 seconds of your new messages.

About Voice Mail Menus



You are at the main Voice Mail screen when you hear the options listed below. If you press **#** while you are at a sub-menu, the system will say, “Invalid entry, please try again.” At that point, press the ***←** key until you hear the below options, indicating that you are at the main Voice Mail menu:


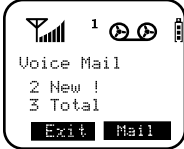

- To play your messages press 1 (this option plays only if you have new or saved messages)
- To record a Message press 2
- To change your Greeting press 3
- To access your Personal Options press 4
- To modify your Constant Touch Options press 5

From the main Voice Mail menu, press **#** to exit Voice Mail. At any time, of course, you may simply hang up.

Logging Into Voice Mail

To play new messages, you can set your Voice Mail options to Normal or Automatic Playback. By default, your voice mail is set to Normal. In this mode, after you log into your account, the system gives you a list of options. To listen to new messages you must select the appropriate option. After each message the system gives you another list of options. These options enable you to tell the system what to do with each message (i.e., save, delete, etc.). If you activate Nextel’s Automatic Playback feature, however, the system will automatically play and save new messages (see “Automatic Playback” on page 34).

<p>1 Turn on your phone and wait to be connected to the Nextel Network. By default, the phone should be in Phone mode. (See “Modes and Menus” on page 14.)</p> <p>If you are calling from a phone other than your Nextel <i>i700plus</i>, dial your ten-digit Nextel <i>i700plus</i> phone number. When you hear Nextel’s Welcome greeting, press * to access your voice mail account, then skip to step 6 below.</p>	 <p>Phone Ready Nextel</p> <p>Name Mail</p>
<p>2 Press 0 under “Mail” to open the Mail screen.</p>	
<p>3 Voice Mail should be highlighted to indicate that it is selected. If it isn’t selected, press 1 to select it. An asterisk indicates new messages.</p>	 <p>1>Voice Mail 2>Msg Mail 3>Net Mail</p> <p>Exit Ok</p>


<p>4 Press  under "Ok." The Voice Mail screen appears.</p> <p>Notice, the screen displays the number of new messages and the total number of messages in the system--including saved and those in preparation (see "Voice Mail Features: Advanced" on page 34 for information on "in preparation" messages). An exclamation point (!) indicates an urgent message.</p>	
<p>5 Press  under "Dial" to log into Nextel's Voice Mail System. Phone-In Use displays as you are connected to the network.</p>	
<p>6 When prompted, enter your password.</p>	
<p>7 Proceed as desired, then exit Voice Mail (see "About Voice Mail Menus" on page 28) or hang up to end the call.</p>	

NOTE: You must receive a message before you can access voice mail from your 1700plus. (Tip: You can leave yourself a message)



Listening Options

With Nextel's Voice Mail Service you can listen to messages either immediately or later (also see "Listening Options (Quick Reference List)" on page 30). Select an option below and follow the steps:

Listen Now

<p>1 Press  under "Dial".</p>
<p>2 When prompted, enter password.</p>
<p>3 Follow the tutorial.</p>

Listen Later

<p>1 Press  under "Exit".</p> <p>Though the  stops flashing, it remains on the screen as a reminder.</p> <p>When you are ready to listen to your messages, follow the steps in the section titled "Logging Into Voice Mail" on page 28.</p>
--

Listening Options (Quick Reference List)

After you access the Nextel Voice Mail Service (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6 to access voice mail) you have several options. The following information tells you what those options are and when you can use them.

Options available when selecting messages to be played:

Play new, unheard messages only.	Press 1 then 1
----------------------------------	------------------------------

Options available while listening to your messages:

Replay previous six seconds.	Press 1
Rewind to beginning of message.	Press 1 then 1
Pause/continue the current message.	Press 2
Fast forward 6 seconds.	Press 3
Fast forward to end of message.	Press 3 then 3
Play the date and time stamp.	Press 5 then 5


Options available while message is playing or after it has played:

Copy a message to another subscriber. See “Voice Mail Features: Advanced” on page 34.	Press 6
Delete the message.	Press 7
Reply to a message.	Press 8
Save the message.	Press 9
Skip to the next message.	Press #
Recover all deleted messages in that session.	Press * then 3

Saving/Deleting Messages

While a message is playing or, after you have finished listening to it, you can save it or delete it. To save a message press **9** when prompted to do so. To delete a message press **7** when prompted to do so (see “Automatic Playback” on page 34 to have messages automatically saved).

 NOTE: To retrieve deleted messages, press ***4** then **3**. This option only applies to the current voice mail session. If you hang up, the messages will be deleted. Messages that are not saved or deleted remain in your mailbox as new messages for 30 days. All messages are automatically deleted after 30 days.



Choosing Order to Play Unheard Messages

With Nextel Voice Mail Service, you can select the order you want unheard messages to be played in. You may listen to the last received message first. Or, you may listen to the first received message first. To select the order new messages should be played in, follow the steps below:

1	Log into voice mail (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 4 to access Personal Options.
3	Press 4 to access Personal Preferences.
4	Press 2 to access Playback Preferences.
5	Press 1 to select preference. Follow the prompts until you have set your desired preferences.
6	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Customizing Your Voice Mail Setup

Changing Your Password

To change your current password follow the steps below:

1	Log into voice mail (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 4ghi to access Personal Options.
3	Press 4ghi to access Personal Preferences.
4	Press 1.* to modify password.
5	Enter your new password (four- to seven digits).
6	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.



For security purposes, it is recommended that you do not choose sequential or repeated digits like 1-2-3-4 or 5-5-5-5 for your password.

Recording Your Name

When you send, reply to, or copy a message your name response precedes the message. To record or rerecord your name at any time use the following steps:

1	Log into voice mail. (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 4ghi to access Personal Options.
3	Press 4ghi to access Personal Preferences.
4	Press 3def to access the Record Your Name option.
5	Press 2abc to record your name.
6	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Recording Your Active Greeting

NOTE: Through the Nextel Voice Mail Service, there are a number of ways people can reach you. You may want to include one or all of the following options in your greeting so that callers will know they are available. Also, in your greeting, you should tell callers to press the pound sign (#) after they have finished recording. This will prompt Voice Mail Service to play the list of menu options shown below:

- Press **1** to send a numeric page.
- Press **2** to send an operator assisted message. (This option is available only if you have Operator Assisted Paging. Contact Nextel Customer Care for more information.)
- Press **9** for other options (after pressing 9 the caller will need to press 5 for Delivery Options, which enables them to mark the message as Urgent, Private, etc.).
- Press **#** to skip the greeting and record message immediately.

Sample Greeting

Below is a sample greeting. You can add the above options as you see fit.

“Hello, you’ve reached _____. I’m sorry I missed your call. If you leave a message at the tone, I’ll return your call as soon as possible. If you would like to bypass this greeting in the future, press pound. Thank you for calling.”

To record or alter your greeting at any time follow the steps below:

1	Log into voice mail (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 3 to change your Greeting.
3	Press 1 to play, 2 to record, or 3 to delete your active greeting.
4	Record your message and press # when you have finished.
5	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Automatic Playback

By default, the Voice Mail Service is set to Normal. Nextel's Automatic Playback feature prompts the Voice Mail Service to automatically play and save new messages, which saves you time and money. To activate Automatic Playback follow the steps below:

1	Log into voice mail (see "Logging Into Voice Mail" on page 28 and follow steps 1 through 6).
2	Press 4 <small>ghi</small> to access Personal Options.
3	Press 4 <small>ghi</small> to access Personal Preferences.
4	Press 2 <small>abc</small> to access Playback Preferences.
5	Press 2 <small>abc</small> and select Automatic Playback.
6	Exit Voice Mail (see "About Voice Mail Menus" on page 28) or hang up to end the call.

NOTE: Deactivate Automatic Playback (after it has been activated) by following the above steps.

Voice Mail Features: Advanced

Recording and Sending A Message

These functions allow you to record and send, reply to, or copy a message to a mailbox number, a name in the Voice Mail Service directory, or a Group List number, to an assigned destination address. After you record a message, the following sending options are available:

NOTE: If you record a complete or partial message--but do not send it, Voice Mail Service will refer to this message as an "in preparation" message. (Before sending messages you may want to See "Special Delivery Options" on page 35.)

Using Mailbox Numbers

To send a message to another mailbox, enter the mailbox number (10-digit telephone number) of the Nextel customer. The name response of the recipient plays if it is recorded.

Using Group Lists

Enter a one- or two-digit Group List Number. You must have previously created this list. (See “Working With Group Lists” on page 38.)

To record and send a message, proceed to the table below:

1	Log into voice mail (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 2^{abc} to record a message.
3	Record your message and press #^m to end the message.
4	Press 9^{wx} at the prompt to indicate that you want to send the message.
5	Enter the mailbox number and/or group list number(s).
6	Press #^m to send.
7	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Special Delivery Options

After you have created a message, you can assign the message to a category before you send it. Below is a list of the categories that can be applied to a message:

Urgent	Recipient will hear this message before other messages.
Private	Recipient cannot copy the message to another mailbox or phone number.
Notification of Non-Delivery	You will be notified if the recipient has not listened to your message by a certain date and time.
Future Delivery	You can specify a specified time and date (up to three months in advance) for the message to be delivered. Important: Once a message has been sent for future delivery, it cannot be retrieved or deleted.

To set a special delivery option, follow the steps below:

1	Log into voice mail (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 2 to record a message.
3	Record your message and press # when you have finished recording.
4	Press 5 for delivery options.
5	Press the number that corresponds with the desired delivery option: <ul style="list-style-type: none">• Press 1 for Urgent• Press 2 for Private• Press 3 for Notification of Non-Delivery -- At prompt, specify time• Press 4 for Future Delivery of Messages -- At prompt, specify time• Press 9 to send the message immediately
6	Enter the destination mailbox or group number of the recipient(s).
7	Press # to send.
8	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Greetings Schedule

Nextel Voice Mail allows you to record up to five separate greetings that can be played based on pre-determined time frames. After you have recorded a greeting for each time frame, you can then select any of those greetings as your active greeting see the following table. For example, if you simply activate the greeting schedule after you record Morning and Afternoon Greetings, the system will automatically play greetings 2 and 3 at the appropriate times. See the list of pre-determined schedules--then refer to the steps in the following table to record your greetings:

Nextel Voice Mail Service

Greeting 1	Generic Greeting	24 hours a day/7 days a week This is the default setting if you haven't activated your greeting schedule.
Greeting 2	Morning Greeting	8:00 a.m. -- 11:59 a.m. Monday -- Friday
Greeting 3	Afternoon Greeting	Noon -- 5:00 p.m. Monday -- Friday
Greeting 4	All Hours	24 hours a day/7 days a week
Greeting 5	All Hours	24 hours a day/7 days a week

To record your greetings, follow the steps below:

1	Log into voice mail (see "Logging Into Voice Mail" on page 28).
2	Press 3^{def} to reach the Greetings menu.
3	Press 4^{ghi} to modify another greeting.
4	Enter the greeting number you wish to create or modify.
5	Press 2^{abc} to record a greeting.
6	Record your greeting and press #^m when you have finished.
7	Exit Voice Mail (see "About Voice Mail Menus" on page 28) or hang up to end the call.

Activating Your Greeting Schedule

To activate your greeting schedule according to the pre-determined time frames (Morning, Afternoon, etc.) follow the steps below:

1	Log into voice mail (see "Logging Into Voice Mail" on page 28).
2	Press 3^{def} to reach the Greetings menu.
3	Press 9^{wxyz} to activate your greeting schedule.
4	Exit Voice Mail (see "About Voice Mail Menus" on page 28) or hang up to end the call.

Working With Group Lists

The Group List feature enables you to create a list and assign it a unique name. Then, you can add mailbox numbers, group lists or individuals--by name--to the list. Once you create a list you can send a voice message to everyone on the list by simply entering the group list number. You can have up to 40 group lists. Each list can hold up to 50 addresses (see "Using Group Lists" on page 35).

Creating Group Lists

To set up a Group List follow the steps below:

1	Log into voice mail (see "Logging Into Voice Mail" on page 28).
2	Press 4ghj to modify another greeting.
3	Press 2abc to access your Group Lists.
4	Press 2abc to create a Group List.
5	Enter the one- or two-digit group list number and press #m .
6	Record a name for the list and press #m .
7	Select group members by mailbox number, group list, or name.
8	Press #m to save all entries added to the list.
9	Exit Voice Mail (see "About Voice Mail Menus" on page 28).

Modifying a Group List

1	Log into voice mail (see "Logging Into Voice Mail" on page 28).
2	Press 4ghj to access Personal Options.
3	Press 2abc to access Group Lists.
4	Press 4ghj to modify a Group List.
5	Enter the number of the Group List you want to modify.
6	Press 1.* to add a new recipient.
7	Press #m to save your changes.
8	Exit Voice Mail (see "About Voice Mail Menus" on page 28) or hang up to end the call.

Deleting a Group List

1	Log into voice mail (see “Logging Into Voice Mail” on page 28).
2	Press 4 ghi to access Personal Options.
3	Press 2 abc to access Group Lists.
4	Press 3 def to delete a group list.
5	Enter the number of the Group List you want to delete. The system will play the name of the group list.
6	Press # m to delete the list.
7	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Message Forwarding

This feature allows you to program your phone to automatically forward incoming messages to another mailbox. There are three types of forwarding: Immediate, Silent and Delayed. They are discussed below:

- **Immediate Forwarding** - Caller is notified that the message will be forwarded.
- **Silent Forwarding** - Caller is not notified that the message will be forwarded.
- **Delayed Forwarding** - If a caller’s message is not retrieved after a certain amount of time, the message will automatically be forwarded to another mailbox or telephone number.

Create/Modify Message Forwarding Number

1	Log into voice mail (see “Logging Into Voice Mail” on page 28).
2	Press 4 ghi to access Personal Options.
3	Press 5 jkl to modify Forwarding Options.
4	Select the applicable option below: <ul style="list-style-type: none">• To create a forwarding number, press 2abc• If you have already created a forwarding number, press 2abc to modify the number
5	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Enabling/Disabling Message Forwarding

1	Log into voice mail (“Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 4 <i>ghi</i> to access Personal Options.
3	Press 5 <i>jkl</i> to modify Forwarding Options.
4	Select the applicable option: <ul style="list-style-type: none">• If Message Forwarding is disabled, press 3 <i>def</i> to enable it.• If Message Forwarding is enabled, press 3 <i>def</i> to disable it.
5	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Modify Forwarding Type

1	Log into voice mail (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 4 <i>ghi</i> to access Personal Options.
3	Press 5 <i>jkl</i> to modify Forwarding Options.
4	Press 4 <i>ghi</i> to modify Forwarding Type.
5	Select one of the following options: <ul style="list-style-type: none">• 1 for Immediate Forwarding• 2 for Silent Forwarding• 3 for Delayed Forwarding
6	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Time and Date Charts

Time and Date Charts can be referenced for specific tasks throughout the Voice Mail System.

Voice Mail 24-hour Military Time Clock

The voice mail service uses military time, also referred to as the 24-hour clock:

NOTE: To compute the 24-hour clock for p.m. time add 1200 to the a.m. time. For example, 2:00 p.m. is 1400 hours in military time (0200 + 1200 = 1400).

Below is a list of hours translated into military time:

Hour	12:00 am	4:00 am	8:00 am	12:00 pm	4:00 pm	10:00 pm
Military Time	0000	0400	0800	1200	1600	2200

Dates

All dates must have 4 digits in the MM/DD format (2 digits for the month and 2 digits for the day). January is 01, February is 02, etc. The first day of the month is 01, the second day of the month is 02, etc.

Pager Notification

If you have purchased a pager and you would like your pager to notify you of incoming messages to your *i700plus* when it is turned off, you can activate this feature. To do so, call Nextel Customer Care at 1-800-639-6111 or dial 611 from your Nextel phone.

Enabling/Disabling Pager Notification

1	Log into voice mail (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 4^{ghi} to access Personal Options.
3	Press 3^{def} to change Pager Notification Options.
4	Select the applicable option below: <ul style="list-style-type: none"> • If Pager Notification is enabled press 3^{def} to disable it. • If Pager Notification is disabled press 3^{def} to enable it. <p>*Press 4^{ghi} to enable notification on urgent messages only.</p>
5	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Limiting Notification to Specific Times

This feature allows you to choose the hours you want the Pager Notification feature to be enabled. By default, it is enabled for 24-hours a day. However, you can change this. For example, you can select to be paged between 8:00 a.m. and 5:00 p.m. only. This enables you to control the time frame Pager Notification will be activated. If a call comes in after 5:00 pm, you will not be paged until 8:00 am the next morning. (Before using this option, you may want to refer to “Time and Date Charts” on page 41 since the phone will only accept times in a 24-hour clock format.)

1	Log into voice mail (see “Logging Into Voice Mail” on page 28 and follow steps 1 through 6).
2	Press 4 <small>ghi</small> to access Personal Options.
3	Press 3 <small>def</small> to change pager notification options.
4	Press 5 <small>jkl</small> to modify your notification time window.
5	Enter the starting and ending times for your time window.
6	Exit Voice Mail (see “About Voice Mail Menus” on page 28) or hang up to end the call.

Additional Phone Services

Nextel offers a variety of services to help you better manage your business and personal calls. Call Nextel Customer Care to subscribe to our enhanced phone services.

About This Section

The main topics covered in this section are as follows:

Call Waiting	Page 43
Call Hold	Page 44
Three-Way Calling	Page 45
Call Forwarding	Page 45
Transferring Calls to Voice Mail	Page 46
Caller ID	Page 46
Alternate Line Service	Page 47

Call Waiting

Call Waiting allows you to receive a second call while you are talking on the phone. With the *i700plus* you can switch between calls so you never have to miss a call. By default, Call Waiting is always ON unless you turn it OFF for a specific call.




If you're on a call and you receive a second call, you will:

- **Hear** a tone; and
- **See** a message on your display informing you of another incoming call.


At that point, select one of the following options and follow the related instructions.

NOTE: If your phone is activated with two lines and you select the Call Waiting option for one line, the alternate line is automatically changed.


Accept Call

Press  under "Yes".

Decline Call

Press  under “No”. If you’re a Nextel Voice Mail customer, the call will be forwarded to your Nextel Voice Mailbox.

Switching Between Calls


Press  under “Hold”. Your phone will refer to the first call as Call-1 and the second call as Call-2. If call 1 is on hold your display will read: **Call 1 - Hold 7035551234** (i.e., the phone number of the call on hold displays).


Ending the Active Call


Press .

Turning Call Waiting Off

If you do not want to be interrupted during a call, you can turn Call Waiting off prior to making/receiving a call.

1 Press  until you see “Wait”.


2 Press  under “Wait”.

3 Press  under “Off”.

Call Waiting is now disabled for one call. It will automatically reset to “On” when you hang up.

Call Hold

When you are on an active call, you can place the call on hold and make a second call.

1 Press .

2 Place the second call.



 
Repeat step to toggle between calls.



Additional Phone Services

Three-Way Calling







Using three-way calling, you can combine two ongoing phone calls into one conversation. This option is available only when you initiate the second call. To do so, follow the steps below:




1	Place or receive a phone call.
2	Press  under “3way” to place the first call on hold.
3	Enter the phone number of the second individual you want to call and press  .
4	After you reach the second individual, press  under “3way”. Both numbers will appear on your display.

Call Forwarding





Call forwarding lets callers reach you wherever you are. Nextel's Call Forwarding feature forwards calls to the number you designate. The instructions below tell you how to use Call Forwarding:

   Turning Call Forward On

1	Press  until you see “Forwd”.	
2	Press  under “Forwd”.	
3	Enter the phone number you want incoming calls forwarded to. (Or, you may press  to select a number from your stored list.)	
4	Press  under “On”.	
5	Press  under “Exit” after the Please Wait message displays.	


Your calls will now be forwarded to the number that you selected and you will see ,  or  (the Call Forward Indicator with the forwarded line number(s) display(s) on your screen). You can forward Line 1 or Line 2 independently.

 Turning Call Forward Off

1	Press  until you see “Forwd”.
2	Press  under “Forwd”.
3	Press  under “Off”.
4	Press  under “Exit” after the Please Wait message displays.

NOTE: You must be in a coverage area to activate or modify call forwarding.

Transferring Calls to Voice Mail

Press  under “End” while your phone is ringing to transfer incoming calls directly to voice mail (purchase required).
--

Caller ID

If you subscribe to Caller ID, your *i700plus* automatically displays the phone number and/or name of the person calling (unless blocked by the caller), enabling you to decide whether to take the call or forward it to voice mail (purchase required).

NOTE: Caller ID is not available in all areas.

Displaying the Caller’s Name

A caller’s name is displayed on your Nextel phone if you previously programmed the person’s name into your phone list (see “Storing Names and Numbers” on page 17). Or, the person’s phone number will display--if the caller’s phone does not have Caller ID block.

Maintaining Your Privacy with Per-Call/Per-Line Blocking

Nextel provides two no-charge methods to prevent those you call from seeing your number on their own Caller ID displays.

NOTE: Your Nextel phone number cannot be blocked from calls made to 911, 800, 877, 888, or 900 phone numbers.

Additional Phone Services

Block Setting	What This Setting Does	To Set
Per-Call Blocking	Selectively blocks delivery of your phone number to other Caller ID units.	Press *67 before dialing the call.
Per-Line Blocking	Permanently blocks delivery of your phone number on every call you make. You can disable this feature on a per-call basis by pressing *82 before the call.	You must order this feature from Nextel. You can disable this feature on a per-call basis by dialing *82 before the call. To get your company's line automatically blocked on every call, contact Nextel Customer Care at 1-800-639-6111.

Alternate Line Service

If you are an alternate line customer, you will be given a unique phone number for each line. With alternate lines, you can separate business and personal calls, or designate one as a "priority line."

If your Nextel phone is activated with two lines, you can have:

- Different pricing by line
- Distinct billing records to track usage
- Separate address billing for each line
- Custom settings for each line


The alternate line does not have all the features of the first line:

- Line 2 shares the voice mailbox with Line 1; there is only one monthly charge.
- You cannot forward Line 2 to Line 1 and have the phone ring; the call defaults to voice mail.
- Text and Numeric Paging is not offered on Line 2.
- A call from Line 2 will appear on the recipient's Caller ID as the Line 1 phone number.

The following settings are independent for each phone line. When you enable a setting, it applies only to the active line.

- Ringer Volume, Selectable Ring Styles, Call Forwarding, One-minute Beep, Display Timer, Reset Timer and Total Timer.

Selecting an Alternate Line

<p>1 Press MENU until you see the alternate “Line1”. (If you are already using Line 1, “Line2” will appear as an option).</p>	
<p>2 Press 1 under “Line1” to select Line 1; or, press 2 under “Line2” to select Line 2, which ever is applicable.</p>	


Receiving Calls on Your Alternate Line

You can receive calls on either line, regardless of the active line setting.

- If the call is on the same line as the currently active line, the Active Line Indicator simply flashes.
- If the call is on the line that is not currently active, the Active Line Indicator remains lit and the alternate line number icon flashes.

When you receive a call on your alternate line, you can accept it or decline it. Select the applicable option from below, and follow the steps:

Accepting Calls
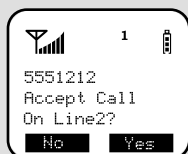
<p>1 Press 1 under “Yes” to answer the call on the other line. Your original call will be placed on hold.</p>	
<p>2 Press END CALL to end the current call and revert to the other call. Or, press 1 under “Hold” to place the current call on hold.</p>	
<p>3 Press 1 under “Hold” to toggle between calls; and revert to the other call. When both calls end, the phone remains active in the last line selected.</p>	

Declining Calls

Press **1** under “No”. If you’re a Nextel Voice Mail customer, the call will be forwarded to your Nextel Voice Mailbox.

Text and Numeric Paging

Your new Nextel Phone offers Text and Numeric Paging allowing callers to send you a text or numeric page displayed directly on your phone. Nextel Paging helps keep you in touch with co-workers and customers, regardless of where you travel on the Nextel National Network. Whether it's your office calling with a last minute schedule change, or a customer trying to reach you with an important question, you'll be able to retrieve and respond to pages immediately, all from your Nextel Phone.

About This Section

The main topics covered in this section are as follows:


Text and Numeric Paging Features	Page 49
Notification of New Pages	Page 50
Accessing New Pages	Page 50
Sending a Page	Page 51

Text and Numeric Paging Features

With Nextel Text and Numeric Paging, Nextel will:

- Allow numeric pages up to 20 characters in length and text pages up to 280 characters in length, sent as two sequential 140 character messages.
- Accept your pages even if you are unavailable, if your phone is turned off, or if you are busy on another call.
- Alert you of a new text or numeric page, even if you are on another call.
- Store a page if you are using Nextel Direct Connect and deliver it upon completion of the call.
- Store the page if you are outside of the coverage area and deliver it as soon as you are back in a coverage area.
- Attempt continuous delivery of pages until successful, for up to 7 days.


With Nextel Text and Numeric Paging, your Nextel Phone will:

- Refer to text and numeric pages as Message Mail.
- Stamp the page with the time and date the page was left.
- Store up to 16 pages, at a time, that will remain until you delete them.
- Allow for "Auto Call Back" of a phone number that is included within a page, by pressing . If the page contains two phone numbers, Auto Call Back will dial the last number.

NOTE: "Mail Waiting, Memory Full" displays when 16 message registers are full. (Messages must be erased before you can receive others.)

Notification of New Pages




When a new page arrives:

- “New Mail Read?” displays.
-  flashes at the top of the screen.
- Phone rings every 30 seconds as an alert/reminder.


 

Accessing New Pages

When you receive a page, you can view it immediately or later:









View a Page Immediately

1	Press  under “Now”. The number of new and saved pages is displayed briefly, followed by your first page.
2	Press  under “Read”.
3	Use the  on the side of the phone to scroll through messages.

  Viewing a Page Later

Press  under “Later”. The  icon will stop flashing but the  icon will remain on the display to remind you that you have a page.
--

Viewing Stored Pages

1	While in Phone Ready mode (see “Modes and Menus” on page 14) press  under “Mail”.
2	If Mesg Mail isn’t highlighted already, press  to select it.
3	Press  under “Ok”.
4	Press  under “Read”.
5	Use the  on the side of the phone to scroll through messages.
6	Press  under “Save” to Save the message. Or, press  under “Erase” to delete the message.
7	Press  under “Exit” to exit Mesg Mail .

Sending a Page

Nextel's Paging feature includes four options: Numeric Paging, Operator Assisted Paging, Web Paging and Email Paging. To use these features review the information below:

Numeric Paging

- The caller must press "1" during your voice mail greeting.
- Only numeric pages can be sent.

*Operator Assisted Paging**

- The caller can press "2" during your voice mail greeting. Or, call 1-800-NEXGRAM (1-800-639-4726).
- A text page can be sent immediately or for future delivery.
- The operator will send the page.
 - * The Operator Assisted Paging feature is required. There is also an additional charge for each message sent. For more information you can visit Nextel at www.nextel.com or call 1-800-639-6111 or dial 611 from your Nextel phone.

Web Paging

Nextel's Web Paging enables you to page yourself, someone else or a group of Nextel customers and includes Schedule a Page. To use Web Paging, follow the steps below:

1	From your computer's Internet browser, go to www.nextel.com and click "Send a Page".
2	The browser automatically opens to "Send an Individual Page". To page an individual, or yourself, type the applicable 10-digit Nextel phone number (for example, 7035551234) in the "To" field. To send a Group Page, select "Group Paging" under Options on the left side of the browser page. In the "To" field, type an individual's 10-digit Nextel phone number. Next, click the "Add" button. The information is inserted in a new window and the "To" field is cleared so you can enter another 10-digit Nextel phone number. You can send a Group Page to up to 20 Nextel users at one time.
3	To schedule a page for future delivery (up to 6 months in advance), click on "Schedule a Page". A new page appears with the following fields: Month, Day, Year, Hour, Min. (Minutes) and AM/PM. Click the down arrows at the end of each field to select the desired month, day, etc. Then click on the "OK" button to store your selections. (The "Cancel" button closes the page without saving your selections.)

4 Type a Subject and a message in the message box.

Notice, you can click on the “Count Characters” button to have the system tell you the number of characters in your message. The total includes characters from the "To", "From", and "Subject" fields as well as system generated characters.

5 Click “Send Page” to send the message. (The “Clear” button removes the information from every field.)

6 A new browser page opens with a copy of your message, the recipient’s telephone number and a Claim Number. You can write down the Claim Number to check on the delivery status later.

Checking Delivery Status

To find out whether or not a message was delivered, and, if so--when, follow the steps below:

1 Visit Nextel’s home page at www.nextel.com.

2 Select “Send a Page”.

3 Select “Message Status” under Options (located on the left side of the browser page).

4 Enter the Recipient Telephone Number and the Claim Number.

5 Click on the “Message Status” button. The system will display the requested information.

E-Mail Paging

From any email account, type the 10-digit phone number, of a Nextel customer, in the “To” field and add @page.nextel.com (for example, 7035551234@page.nextel.com).

Using Your Phone As A Modem

With Nextel Online Dial-up Services, you can use your *i700plus* as a modem for your IBM™ PC-compatible laptop computer (using Microsoft® Windows) and Personal Digital Assistants (PDAs) such as Palm Pilots and Win CE compatible handheld computers. This is particularly useful when there is no wired phone line (wall jack) available.

From practically anywhere, you can connect to your company's network or the Internet--as long as you have your *i700plus* and you are in a Nextel coverage area (for coverage area information, visit us at www.nextel.com. Select "Digital Coverage". Then select "Click for Nextel Coverage Map".

With this service, simply connect the data cable (sold separately) to your computer and to the *i700plus* phone. This will allow you to send or receive time-critical information such as e-mails, field service reports, or files.

NOTE: To take advantage of this feature, you must subscribe to Nextel Online Dial-up Service. For more information, contact your Nextel Authorized Representative.

Private/Group Mode

Nextel Direct Connect ®

Nextel Direct Connect is a revolutionary way to communicate with your co-workers and clients...for a fraction of the cost of traditional cellular calls.

You may want to talk to a co-worker right away, but you don't want to page that person or leave a lengthy message. With Nextel Direct Connect's Private Call feature, you can find them wherever they are in your home coverage area.

Or, maybe you need to communicate a last-minute schedule change to your sales people... all 100 of them. It's easy with Nextel Direct Connect's Group Call. This digital two-way radio feature lets you contact all of them at once!

In addition, Nextel has created Nextel Business NetworksSM, which allows you to communicate with individuals outside as well as inside your company. These Networks link Nextel customers in similar industries or geographies. So, if you need to reach a client, vendor, or contractor instantly, work smarter by joining the Nextel Business Networks. For more information, call 1-888-NEXTEL2 (1-888-639-8352).

About This Section

This section includes everything you will need to know to take advantage of Nextel Direct Connect (two-way radio) service:

Programming Your Own Private ID	Page 55
Using the Private/Group Speaker	Page 55
Placing Private Calls	Page 55
Receiving Private Calls	Page 57
Quickstore of Private IDs	Page 57
Sending a Call Alert	Page 57
Receiving/Responding to a Call Alert	Page 57
Call Alert Queuing	Page 58
Group Calls	Page 58
Group-Silent Programming	Page 60

Programming Your Own Private ID

1	Press then then then under “Ok”. (After Private ID is programmed, the option will read “Edit”.)
2	Enter your Private ID.
3	Press under “Store”.
4	Press under “Exit”.

Displaying Your Private ID

Press then then .

Using the Private/Group Speaker

You can enable or disable the speaker on your *i700plus* for Direct Connect use. When the speaker is on, the caller’s voice can be heard over the speaker. When the speaker is off, the caller’s voice can only be heard through the earpiece of your phone.

Turning the Speaker On

Press .


Turning the Speaker Off

Press . will appear on your display. A brief alert tone will notify you of incoming Private or Group calls.




 

Placing Private Calls

From **Private** Mode, there are also two ways to reach an individual using Direct Connect. You can enter the person’s Private ID number then press the Push-To-Talk button. Or, you can store the person’s name and private ID number, then recall the number from a stored list. Whether you dial the person’s private ID directly or store it in a list—you must have the individual’s private ID to use Direct Connect. To learn how to store names and numbers, see “Storing Names and Numbers” on page 17 if you haven’t done so already.

Entering the Private ID

1	Press  until you see Prvt Ready .
2	Enter the Private ID.
3	Press and hold the Push-To-Talk button on the side of the phone to talk. Both phones will chirp before your voice can be heard.
4	Release the Push-To-Talk button to listen.

Selecting a Name from a Stored List

1	Press  until you see Prvt Ready .
2	Press  to scroll through the names. Or, Press  until "Name" appears. Press  under "Name" and enter the first initial of the name then press  to scroll through the names.
3	Press and hold the Push-To-Talk button on the side of the phone. The person's phone will chirp to alert them that someone is calling.
4	Release the Push-To-Talk button to listen.

NOTE: You may receive certain display messages when making a Direct Connect call. See "Understanding Status Messages" on page 82.



Receiving Private Calls

When you receive a Direct Connect call, your phone will switch to Prvt Ready. You will hear a chirp indicating that someone is calling you. Press and hold the Push-To-Talk button to talk and release it to listen.

Quickstore of Private IDs



Quickstore allows you to quickly store a received or sent Private ID without having to enter the Programming menu.

With the Private ID displayed:

1	Press  under “Store”.
2	Enter the name associated with the Private ID.
3	Press  under “Store”. The Stored message displays with the name that you entered.


Sending a Call Alert

You can send a Call Alert, which lets the recipient know that you would like to talk with them. When you send an alert, the recipient’s phone will chirp several times and your name/number will appear on their display, if they have stored your Private ID.

1	Press  until you see Prvt Ready .
2	Press  under “Alert”.
3	Select the person you want to alert by entering their Private ID or selecting their name from a stored list. (See “Selecting a Name from a Stored List” on page 56.)
4	Press and hold the Push-To-Talk button until “ Alert-Sent Successful ” displays. The alert plays intermittently until the individual clears it.

Receiving/Responding to a Call Alert

When you receive an alert, your phone will automatically change to **Prvt Ready** mode. It will also chirp and you will see the name or the number (if you have not stored the individual in a list) of the caller.

1	Press and hold the Push-To-Talk button to answer the Call Alert.
2	Press  under “Clear”, or any key, to clear the Call Alert.

NOTE: Call Alert allows you to contact another Nextel Direct Connect subscriber at no cost and avoid airtime charges.


NOTE: Until you answer or clear the Call Alert, you will not receive any additional Phone, Private, or Group calls.



Call Alert Queuing

Call Alert Queuing is a feature that allows you to save up to eight Call Alerts in a Queue or list.

Placing/Clearing a Call Alert in the Queue

When you receive a Call Alert, you can either clear the Call Alert or save it to the list for later recall.



To clear a Call Alert, press  under "Clear".

To place a Call Alert in the Queue, press  under "Queue" or .

NOTE: If you receive multiple Call Alerts, the last received Call Alert displays and the remaining Call Alerts are stacked at the beginning of the queue.

Responding to a Call Alert within the Queue

You can respond to the Call Alerts in any order. To select a Call Alert for response:

- 1 Press  under "Queue".
- 2 Press  to scroll to the desired Call Alert.
- 3 Press and hold the Push-To-Talk button to answer the Call Alert. After you respond to the Alert, it is removed from the queue.

Group Calls

In a Group call, you can communicate instantly with a group of people (up to 100) that you have previously set up as a "Talkgroup". Your Sales Representative or Nextel Customer Care must set up your Talkgroup by providing you with a Talkgroup number for each Talkgroup. After you have the number, you can assign each Talkgroup number a name and store it in your *i700plus* (see "Naming a Talkgroup" on page 59).

Talkgroups appear on your display as numbers or programmed names such as SALES TEAM or Talkgrp 5. Your Nextel Phone can store up to 30 Talkgroups. You can receive Group calls only in the Talkgroups that you have predefined.

Any communication activity within a Talkgroup automatically switches your phone to **Group** mode.

Naming a Talkgroup

1	Press then then then .
2	Press under “Ok”.
3	At Add New Entry? , press under “Ok”.
4	At Enter ID , enter the desired Talkgroup number.
5	Press under “Store”.
6	At Enter Name , enter the desired Talkgroup name.
7	Press under “Store”.

Making a Group Call

1	From Group Mode, press to scroll to the desired Talkgroup.
2	Press under “Ok”.
3	Press and hold the Push-To-Talk button to talk. Release the Push-To-Talk button to listen.

Receiving a Group Call

When you receive a Group call, you will hear a chirp. Your Nextel phone automatically switches to **Group** mode and the Talkgroup name displays. To join a Group call:

1	Wait for the caller to finish speaking.
2	Press and hold the Push-To-Talk button to talk. Release the Push-To-Talk button to listen.

NOTE: You can receive Group Calls only in the Talkgroup that you have predefined.

Group-Silent Programming

Group-Silent Programming enables you to silence incoming alerts and voices:

Turning Group-Silent On/Off

1	Press * then # then 3 then 8 .
2	Press 0 under “On” or “Off”. (The available option depends on the current setting being used. For example, if “On” is the current setting, “Off” will be an option.)
3	Press 0 under “Exit”. The Group Ready screen displays as Group-Silent .

Customizing the *i700plus*

About This Section

This section includes everything you will need to know to customize your *i700plus*:

Changing the Display Language	Page 61
Setting the Time and Date	Page 61
Setting the Ringer Volume	Page 63
Selecting a Ring Style	Page 63
Setting VibraCall™	Page 64
Programming Menus	Page 65

Changing the Display Language

You can customize the *i700plus* to display menus in English, Spanish, French, or Portuguese. The default language is English. To change the display language:

- 1 Press then then then .
- 2 Press under “Ok”.
- 3 Press to scroll the language options.
- 4 Press under “Ok” to select the desired language.
- 5 Press under “Exit”.

Setting the Time and Date

IMPORTANT: The Time and Date may not be available in your area and may not appear on your display. Once this feature becomes available, your *i700plus* will automatically display the local time and date.



You have a choice of a 12- or a 24-hour clock format, as shown in the table below:

12-Hour Display	12:00 am	6:25 am	12:00 pm	10:25 pm
24-Hour Display	00:00	06:25	12:00	22:25

You have a choice of either a MM/DD (month/day) or a DD/MM (day/month) date format as shown in the table below.

Date	Month/Day Format (MM/DD)	Day/Month Format (DD/MM)
January 2nd	01/02	02/01
December 31st	12/31	31/12

All of the modes (**Phone Ready, Private Ready, Group Ready, Net Ready**) display the time and date on the third line of the display.

To set the time and date format once this feature is activated, follow the steps below:

- 1 Press then then then .
- 2 Press under “Ok”. The **Time/Date Display** screen appears.
The default (preset) time and date format is “On”. However, the time and date does not display until the Nextel National Network activates this feature.
- 3 Press until you see the **Time Format** screen.
- 4 The hour format currently being used appears under **Time Format:**. To keep the current setting, simply skip to the next step. Or, Press under the available option. (For example, if “12 hour” format is the current setting, “24hr” will appear as an option.)
- 5 Press until you see the **Date Format** screen. The format being used appears under **Date Format:**.
- 6 To keep your current format, press under “Exit”. Or, Press under the available date format. (For example, if MM/DD is the current setting, “DD/MM” will appear as an option.)
- 7 Press under “Exit”. The **Phone, Private, Group, and Net Ready** screens display the selected time and date formats.

Setting the Ringer Volume

You can adjust the ringer volume for incoming calls. For Alternate Line users, be sure to select the phone line before setting the ringer volume (See “Selecting an Alternate Line” on page 48).



1 Press ***←** then **#→** then **3^{def}** then **0^{next}**. The display shows your current ringer volume.

2 Press **0** on the side of your phone to raise or lower the volume. The lowest setting is “Volume Silent.”

3 Once the desired level is found, press **0** under “Exit”.

Selecting a Ring Style

With your *i700plus*, you even have a choice on how you’d like to be notified of incoming calls. Your Nextel phone has nine selectable ring styles. Users with Alternate Line Service can use the same ring style or different ring styles for each phone line, so you can tell which line is ringing. Be sure you are on the correct line when selecting a ring style.



1 Press ***←** then **#→** then **3^{def}** then **1^{next}**. The display shows your current ring style.

2 Press **0** under “Ok”.

3 Press **←→** to scroll through the available **Ring Styles**.

4 Press **0** on side of phone to listen to selected ring style.


 
5 Once the desired **Ring Style** is found, press **0** under “Ok”.

6 Press **0** under “Exit”.





Setting VibraCall™

VibraCall is a vibration alert system that notifies you of incoming Phone, Private, or Group calls and messages by repetitive vibration rather than ringing. You can select this alert system for all incoming calls/messages, or select individual services for VibraCall.

NOTE: When you set vibration alerts, they are set only for the current line. If you have a second phone line, you must select “Line 2” and repeat the procedure for selecting all services or selecting individual services to vibrate.

VibraCall Settings	What this setting does
Vibrate Alert	Vibrates for all incoming calls and messages.  -- Vibrate All appears on the display.  -- Speaker Off appears on the display to remind you that the audio will be heard through the earpiece instead of the speaker.
Phone Vibrate	Vibrates only for incoming phone calls and Nextel Online data calls.
Phone Vibrate/ Ring	Vibrates and rings for phone calls and Nextel Online data calls and Net alerts.
Mail Vibe	Vibrates for mail messages and Net alerts (future availability).
Group/Prvt Vibe	Vibrates for incoming group and private calls.

 Using Vibrate Alert

Press  then  then  then  under “All”. The *i700plus* will emit a brief vibration and also on subsequent power-ups.

Using Phone, Mail and Group/Prvt Vibrate Option

To use Phone Vibrate, Phone Vibrate/Ring, Mail Vibe or Group/Prvt Vibe follow the steps below:

1	Press then then .
2	Press until you see the “Selct” option.
3	Press under “Selct”. The first selection is Phone Vibrate . Then press to scroll to Mail Vibe, then Group/Prvt Vibe. <ul style="list-style-type: none">• To use Phone Vibrate/Ring, from Phone Vibrate display, press then press under “V/Rng”.
4	Press under “On” or “Off” (whichever is applicable).
5	Press under “Exit”.

Programming Menus

You can customize the settings on your phone using the Programming menus. Many of them have been discussed throughout this guide.

You can access this menu from the **Phone**, **Private**, or **Group** modes.

1	Press until you see the “Prgm” option.
2	Press under “Prgm”.
3	Press under “Ok”.
4	Press to scroll the Programming menu options, or enter the option keypad number. Or, You can use the Programming Menus Shortcut on Page 66.

Programming Menus Shortcut and Options

Press ***←**, **#→** then enter the Option Number from the following table:

Option Number	Menu Option	Function
1	Own Ph#	Store and display your Nextel handset's telephone number. See "Programming Your Own Phone Number" on page 21 and "Displaying Your Phone Number" on page 22.
2	Own PvtID	Store and display your Nextel handset's Private ID. See "Programming Your Own Private ID" on page 55 and "Displaying Your Private ID" on page 55.
3	Mail Display	Turn on or off the New Mail message that is displayed with incoming Voice, Message, or Net Mail (future availability).
4	Manual Lock:On/Off	Lock your phone to prevent unauthorized use. You must enter a password to unlock it. Even with the manual lock on, you can reach emergency help by pressing and holding the 911 key.
5	Auto Lock:On/Off	Automatically lock your phone each time it is powered off to prevent unauthorized use.
6	Auto Answer:On/Off	Turn on or off automatic answering of incoming phone calls after 1-4 rings.
9	Vibrate Alert:On/Off	Provide non-audible notification of incoming phone and Nextel Online Data calls and messages. See "Setting VibraCall™ Page 64".
10	Last Call Timer	Display the duration of the most recent phone call.
11	Display Timer:On/Off	Turn on or off automatic display of the Last Call Timer at the end of each phone call.
12	Reset Timer	Display cumulative airtime of all phone calls since the last time the timer was reset.


Customizing the i700plus

Option Number	Menu Option	Function
13	Total Timer	Display cumulative airtime of all phone calls.
14	1 Minute Beep:On/Off	Automatically signal each minute of elapsed phone airtime with an audible beep.
20	Phone/Prvt List	Add phone and private numbers in one procedure. See “Nextel Direct Connect®” on page 54.
21	Phone List Edit	Edit or erase up to 100 frequently called phone numbers and associated names. See “Editing Stored List Entries” on page 19.
22	Prvt ID List Edit	Edit or erase up to 100 Private ID numbers and associated names. See “Editing Stored List Entries” on page 19.
23	Talkgrp List Program	Add, edit, or erase numbers and associated names for up to 10 pre-programmed talkgroups. See “Naming a Talkgroup” on page 59.
24	Area List Program	Add, edit, or erase numbers and associated names for up to 50 targeted areas.
30	Ringer Volume	Set the ringer volume using the volume control keys, or lower the volume to silence the ringer.
31	Set Ring Style	Select a distinct ring style for incoming phone calls.
32	Mail Volume	Set the volume of incoming pages, Voice Mail, and Net alert tones (future availability) using the volume control keys. Or lower the volume to silence the mail alert tones.
33	Earpiece Volume	Set the default earpiece volume using the volume control keys.
34	Keypad Volume	Set the volume of the keypad tones using the volume control keys, or to silence the keypad tones.

Option Number	Menu Option	Function
35	Speaker Volume	Temporarily adjust the Private/Group speaker volume for noisy environments.
36	Spkr Vol SetTone	Turn the speaker volume set tones on or off.
38	Silent Group: On/ Off	Silence all incoming Group Call alerts and voice activity. When set, your screen displays the message, "Group-Silent". See "Turning Group-Silent On/Off" on page 60.
40	Change Passcode	Change your secret four-digit password from the initial setting 0000.
60	Set Baud Rate	Set the modem baud rate between the phone and the PC. See Nextel Online Dial-up Service User's Guide.
61	Data Ring Volume	Set the default data ringer volume using the volume control buttons. See Nextel Online Dial-up Service User's Guide.
62	Pgm Data#	View your circuit data number. See Nextel Online Dial-up Service User's Guide.
63	IP Address	View the Internet Protocol (IP) Address-1 for your browser, as programmed in your phone. If your phone is cabled to a computer, view IP Address-2, the stored IP address of your computer. Use the scroll keys to view either one. (Future availability)
64	Reset KBytes Tx/ Rx	View the number of Kilobytes sent and received for data. (Future availability)
65	Lines per Screen	For message mail, select 4 lines, 12 characters or 6 lines, 16 characters (default).
70	Language	Select one of four languages for your display text. The default is English. See "Changing the Display Language" on page 61.

Customizing the i700plus

Option Number	Menu Option	Function
71	Time/Date	Select the standard or military time and MM/DD or DD/MM date format. *Not available in all areas.

	<p>Do not try to program menus 41 through 51 as you could permanently damage your phone. They are for Nextel Customer Care use only and should never be programmed by customers.</p>
---	---

Option Number	Menu Option	Function
41	Feature Reset	Returns all feature settings to their original defaults.
42	Master Clear	Performs Feature Reset and erases all stored lists.
43	Master Reset	Resets the phone's identification number.
44	Change Service Key	Changes or resets the fraud prevention service key.
50	NAM	Selects alternate Numeric Assignment Module (NAM).
51	Network ID	Edits the pre-programmed Network number list and select roaming options.

Ordering Information

Nextel Business Networks allow you to communicate with individuals outside as well as inside your company. These Networks link Nextel customers in similar industries or geographies. So, if you need to reach a client, vendor, or contractor instantly, work smarter by joining the Nextel Business Networks. **Call 1-888-NEXTEL2 (1-888-639-8352).**

Various accessories are available for use with your i700plus, including a Hands-Free Car Kit, Swivel Belt Clip, and Cigarette Lighter Adaptor. To order accessories discussed in this guide, or for a brochure of additional accessories, call **Nextel Nextday Accessories at 1-800-914-3240** or contact your Nextel Authorized Representative.

Call **Nextel Customer Care at 1-800-639-6111 or 611 from your i700plus** to order any services discussed in this guide, including Direct Connect, Additional Phone Services, Voice Mail, Paging Features and much more!

For Information on **Direct ProtectSM insurance** protection for your Nextel phone and more, **call 1-888-352-9182** or contact your Nextel Authorized Representative.

Visit us at www.nextel.com to learn more about Nextel products and services!

Accessories

Batteries

NOTE: For best results, charge the batteries within the temperature range of 10°C to 40°C (50F to 104°F). Prolonged charging is not recommended. See below for battery charging times.

Charging the Battery

To get the maximum use from the battery, charge it for at least 10 hours before you use it for the first time. See Table below for battery charging times. While your *i700plus* is attached to a charger you can leave the phone off, turn it on, or use it. For best charging results, leave it off.

Attach the Charger to the *i700plus* via the Side Charging Jack, and plug the charger into an electrical outlet.

Battery Charging Times

Motorola Battery	Charging Time to 90%:	
Description Chemistry	Standard Travel Charger	Rapid Charger
Standard NiMH	5 hours	75 minutes

Battery Operating Instructions

 
- Extreme temperatures will degrade battery performance. Do not store your battery where temperatures exceed 60°C (140°F) or fall below -20°C (4°F).
- The battery capacity will be degraded if stored for long periods while fully charged. If long term storage is required, store at half capacity.
- For optimal battery life, use a Motorola iDEN approved NiMH Charger with your Motorola IDEN NiMH battery. Other chargers may not fully charge your NiMH or may yield reduced number of charge cycles.

Travel Chargers


Using a Travel Charger, you can charge a battery from an electrical outlet.

You can use:

- The Standard Travel Charger
- The Rapid Travel Charger with U.S. adaptor plug

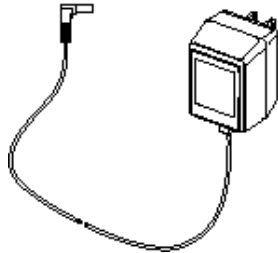

Standard Travel Charger

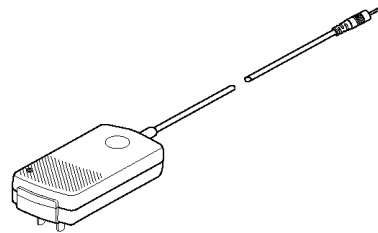 

Rapid Travel

Using the Standard Travel Charger

- | | |
|---|---|
| 1 | Insert the Standard Travel Charger's power supply plug into an electrical outlet (110V U.S.). |
| 2 | Insert the Charger's DC plug into the Side Charging Jack on your <i>i700plus</i> . |

Using the Rapid Travel Charger (110V/220V/240V)

- | | |
|---|---|
| 1 | Insert the wall plug adapter into the Rapid Travel Charger's power supply. |
| 2 | Insert the Charger's power supply into an electrical outlet (110V/220V/240V International). |
| 3 | Insert the DC plug into the Side Charging Jack of your <i>i700plus</i> . The power light (green LED) turns on when the Rapid Travel Charger is receiving power. |

Standard Travel Charger Operating Specifications

Input voltage range: 110V - U.S.

Operating temperature range: 0°C to +50°C.

Rapid Travel Charger Operating Specifications

Input voltage range: 110V/220V/240V - International.

 
Operating temperature range: 0°C to +50°C.

Cigarette Lighter Adapter

The Cigarette Lighter Adapter enables in-vehicle communications by charging the NiMH battery and providing power to your *i700plus*.

The power light (green LED) will light when the Cigarette Lighter Adapter is receiving power.

Using the Cigarette Lighter Adapter

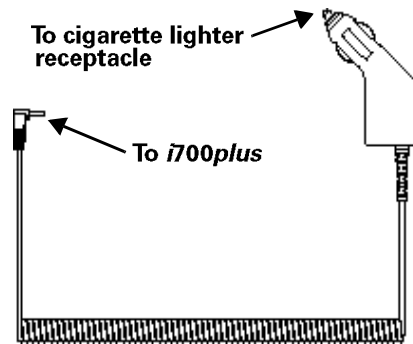

- | | |
|---|---|
| 1 | Insert the Cigarette Lighter Adapter's DC plug into the Side Charging Jack of your <i>i700plus</i> . |
| 2 | Push firmly until the plug rests securely in the accessory charger connector. |
| 3 | Remove the vehicle's cigarette lighter plug (if one exists) from the cigarette lighter receptacle. |
| 4 | Plug the Cigarette Lighter Adapter into the cigarette lighter receptacle. The power light (green LED) will turn on. |



It is recommended that you disconnect the Cigarette Lighter Adapter once you turn your car off to avoid draining the car battery.

Removing the Cigarette Lighter Adapter

- | | |
|----------|---|
| 1 | Unplug the Cigarette Lighter Adapter from the vehicle's cigarette lighter receptacle. |
| 2 | Gently pull the plug from the Side Charging Jack of your <i>i700plus</i> . |

Cigarette Lighter Adapter Operating Specifications

Operating voltage range: 10.8 - 33.0 Vdc.

 
Operating temperature range: -30°C to +60°C.

Desktop Dual-Pocket Charger

The Desktop Dual-Pocket Charger charges Motorola authorized batteries, as listed on Page 71, for the *i700plus*.

NOTE: The Desktop Dual-Pocket Charger should only be powered by the included Rapid Power Supply. The Charger will flash both LEDs red if the Standard Travel charger is attached.

Charging a Battery

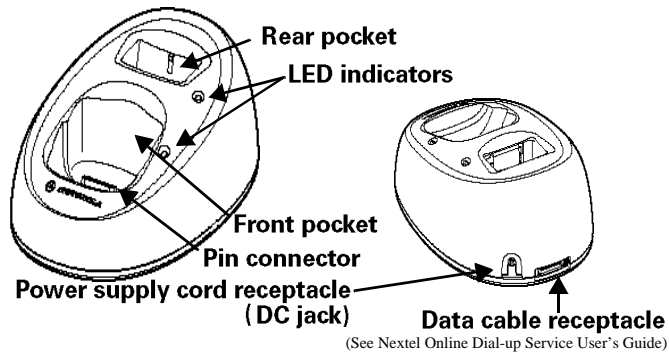

- | | |
|----------|---|
| 1 | Insert the power supply's DC jack plug into the DC jack receptacle on the back of the Charger.

NOTE: Use only with the Motorola rapid charger included with your Desktop Charger package. |
| 2 | Plug the power supply end of the power-supply cord into any standard AC outlet. The Charger performs a quick power-up self-test. The LED indicators will flash once to indicate a successful power-up. |
| 3 | Attach a battery to your <i>i700plus</i> . |
| 4 | Place the accessory and data cable connector on your <i>i700plus</i> into the pin connector located in the charger's front pocket. |

NOTE: Charging times may vary when performing data operations.

Adding and Removing a Battery from the Rear Pocket

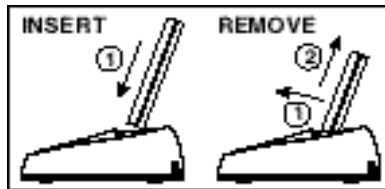 


Figure 1. Adding and Removing a Battery from the Rear Pocket

- | | |
|----------|--|
| 1 | Insert the Battery with the Motorola label facing forward and the (+) and (-) symbols pointing downward. |
| 2 | To remove the Battery, pull it forward, then up and out of the Charger. |

NOTE: If a battery is in the rear pocket and the *i700plus* with a battery is inserted into the front pocket, the battery in the front pocket will charge to full capacity before the battery in the rear pocket is charged. The LED for the rear pocket flashes yellow, indicating that its battery is waiting to be charged. To remove the battery from the rear pocket, hold the base of the Charger and pull the battery forward then straight up.

Desktop Charger Status

The Charger displays the battery's charge status. The indicator will show one of the following:

solid red =1-30%; solid yellow =31-60%; flashing green =61-90%; solid green =91-100%.

Desktop Charger Troubleshooting

If the battery is not charging and there is:

A flashing yellow indicator -

- If a battery is in the rear pocket, the rear pocket's LED continues to flash yellow (indicating that the charger's pocket is in a "Wait State") until the battery in the front pocket is more than 90% charged (front pocket's LED is solid green). This is normal operation.
- To protect your battery's life expectancy, the Charger does not rapid charge a battery when its temperature is below 5°C (41°F) or above 45°C (113°F).

No LED indication -

- Check that the *i700plus* with battery, or a battery alone, is inserted correctly.
- Make sure that the power supply is plugged into an appropriate AC outlet and that the connector is properly seated.
- *Rear pocket only:* Remove the battery from the Charger. Use an ordinary pencil eraser to clean the three metal contacts on the battery and then place the battery in the Charger.
- If the LED indicator remains turned OFF, the battery may be defective and should be replaced.

A flashing red indicator -

- Remove the battery from the Charger. Use an ordinary pencil eraser to clean the metal contacts on the battery and then place the battery into the Charger.
- If the LED indicator continues to flash red, the battery may be defective and should be replaced.
- If both LEDs flash red, this indicates that the incorrect power supply is plugged in.

Audio Adapter

The Audio Adapter connects an earpiece microphone or headset to your *i700plus* for privacy and hands-free operation.

The Audio Adapter fits onto the bottom of the *i700plus* and provides a standard 2.5mm jack connection for an earpiece microphone or headset.

Using the Audio Adapter

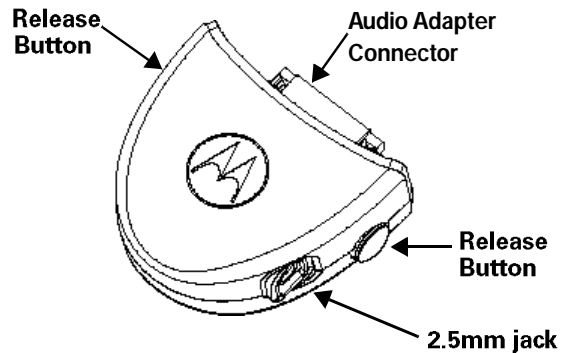 


Figure 2. Using the Audio Adapter

- | | |
|---|--|
| 1 | Hold the phone and the Audio Adapter facing you so that you see the Motorola logo on the adapter. |
| 2 | Insert the Audio Adapter's connector into the <i>i700plus</i> Accessory and Data Cable Connector. You will hear the connector snap into place. |

Attaching/Detaching the Earpiece Microphone or Headset

- | | |
|---|--|
| 1 | Insert the 2.5mm plug of the earpiece microphone or headset cord into the jack of the Audio Adapter. |
| 2 | Pull on the plug, not the cord, to remove the earpiece microphone. |

Removing the Audio Adapter

- | | |
|---|---|
| 1 | Simultaneously press the "Release" buttons located on each side of the Audio Adapter. |
| 2 | Pull the Audio Adapter from the <i>i700plus</i> . |

Dash Mount Holder

The Dash Mount Holder provides a convenient holder for your *i700plus*. The Dash Mount Holder can be installed either horizontally or vertically.

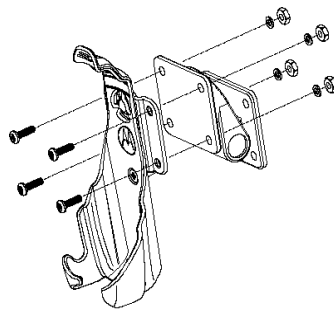 
 


Figure 3. Installing the Dash Mount Holder

Using the Dash Mount Holder

- | | |
|---|---|
| 1 | Mount the Dash Mount Holder to the dash of your vehicle by securing the four self-tapping screws to the base of the Holder. Or, for a semi-permanent installation, use the included adhesive strip. |
| 2 | Snap your phone securely into the holder. |

Swivel Belt Clip

The Swivel Belt Clip provides a convenient means by which to carry your *i700plus* with you.

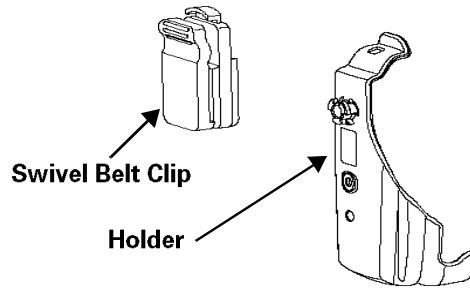 


Figure 4. Using the Swivel Belt Clip


1	Attach the Swivel Belt Clip to your belt.
2	Insert your <i>i700plus</i> into the belt clip holder and attach the holder to the Swivel Belt Clip.
3	To remove your <i>i700plus</i> from the holder, push the holder tab inward while pulling the phone outward.
4	To remove your <i>i700plus</i> and the holder from the Swivel Belt Clip, push down on the button on top of the Swivel Belt Clip and lift the phone out. Or, rotate the phone and the holder 180°, then pull the phone straight up and out of the Swivel Belt Clip.

Leather Carry Case

The Leather Carry Case protects your *i700plus* while on the go. Its leather belt clip attaches easily to your belt or purse. The front of the Carry Case is a clear plastic cover which enables you to use your *i700plus* without removing it from its case.

The Leather Carry Case accommodates most *i700plus* accessories, including Travel Chargers, audio accessories, vehicle accessories, and data accessories (See Nextel Online Dial-up Service User's Guide.).

Hands-Free Car Kit

	<p>The Hands-Free Car Kit is also a charger. Therefore, DO NOT operate this kit and the Cigarette Lighter Adapter at the same time.</p>
---	--

The Hands-Free Car Kit enables in-vehicle communications by providing a built-in speaker, a power supply for the phone's internal battery charger, hands-free visor microphone, Dash Mount Holder and power to the phone.

An external Push-To-Talk (PTT) switch is also present. When the phone is turned off, the Hands-Free Car Kit charges the Standard battery in 75 minutes to 90% capacity. Charging time will be longer if the phone is operational during charge time.

Using the Hands-Free Car Kit

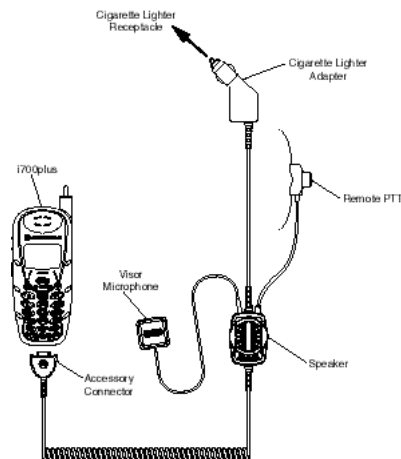 


Figure 5. Using the Hands-Free Car Kit

- 1 While holding the *i700plus* with its front toward you, insert the accessory connector (Motorola logo facing you) into the Accessory and Data Cable Connector until it clicks into place.
- 2 Remove the vehicle's cigarette lighter from the cigarette lighter receptacle.
- 3 Plug the Hands-Free Car Kit's cigarette lighter adapter into the cigarette lighter receptacle. The power light (green LED) will come on.

- 4 Selecting the correct position for the hands-free Visor Microphone is vital for the performance of the hands-free circuitry. It is recommended that the microphone be mounted either on the sun visor directly above (and facing) the driver, or on the headliner, just above (and facing) the driver.



The visor microphone should **NOT** be located within 12 inches of the speaker box.

It should never be mounted near the vehicle's window, or in a spot where the road and ambient noise are substantially high.

It should be mounted so that it does not come into contact with the airbag, or interfere with airbag deployment.

- 5 Turn on your *i700plus*.
- 6 Adjust the speaker volume using the volume control buttons on your *i700plus*.

To remove the *i700plus*:

Push the Motorola logo button on the accessory connector and remove the connector from the phone.

NOTE: The *i700plus* should only be used with a Hands-Free Car Kit that has a gray button on the accessory connector. The use of any other hands-free car kit will result in an "incompatible accessory" message on the phone's display.

Other Important Information

Nextel Customer Care

Relax! Nextel Customer Care is here to help. There are lots of features packed into your Nextel service...and into your *i700plus* phone. But don't worry. If, after reading this guide, you still have questions about coverage, billing, Nextel Direct Connect or any other service or feature, call us.

We'll be happy to give you help, explanations and anything else you need to enjoy your Nextel service as soon as possible!

Before you call Nextel Customer Care for service or to resolve an issue, be sure to have your IMEI number and your Model number ready. These numbers are located on a sticker behind the battery on the back of your Nextel phone. Your IMEI number is a 15-digit number beginning with "000". The Model number is a 10-digit alpha-numeric code beginning with "831". You'll want to record these numbers, and keep them handy, so that you can replace the battery prior to making your call. Use the Quick Reference Card located on the back cover for easy reference.

Understanding Status Messages

You may receive status messages under certain conditions. Before contacting your carrier, note the message, numeric code, and the conditions under which it appeared. The following table lists and describes the status messages.

Status Messages	Message Description
Number Not in Service	The number that you entered is not valid.
User Not Available	The phone that you called is either busy, out-of-range, or turned off. Please try again later.
User Not Authorized	The party that you called has not purchased this service.
Please Try Later	This service is temporarily not available. Please try again later.
User Busy in Private	The phone that you called is busy in a Private call.
User (Target) Busy in Data	The phone that you called is busy using Nextel Online Services (future availability).
Service Restricted	This service was restricted by your service provider or it was not purchased.

Understanding Status Messages

Status Messages	Message Description
Service Not Available	This feature is not available on the current network.
System Busy Try Later	The system is experiencing heavy traffic. Please try again later.
Status Messages	Message Description
Service Conflict	This service cannot be enabled because an incompatible service has already been turned on.
Please Try Again	An error occurred. Note the error code and try again.
Self Check Error	A fault was detected with your Nextel phone. If this error recurs, note the error code and contact Customer Care.
Self Check Fail	An operational fault was detected with your phone. Note the numeric code, turn your Nextel phone off, and contact Customer Care.

Nextel Terms and Conditions of Service

Terms and Conditions

TERMS AND CONDITIONS OF SERVICE: Before calling the Nextel Customer Service Activation Number contained in these materials, you ("Customer") must read and agree to the following terms and conditions of Nextel wireless telephone service ("Service"). By calling to activate service, Customer applies and subscribes for Services provided by Nextel (the "Company") and confirms that Customer has read, understands, agrees to and accepts the terms and conditions stated herein. Customer understands that Company will rely upon the information provided by Customer including credit information, in making a decision to provide Services. Customer understands that Company may request and verify Customer's bank references and perform a credit history check utilizing standard commercial credit reference services in connection with Company's review of the Customer's credit worthiness. Customer understands that a security deposit or air time usage limit may be required.

1. **USE OF SERVICE** — Customer must comply with all FCC rules and regulations. Customer will not use the Service for any unlawful purpose. Customer will not use the Service in aircraft.
2. **CREDIT APPLICATION** — This Agreement shall be contingent upon Company's approval of Customer's credit. Company may require Customer to update credit information from time to time. Customer warrants and represents that all credit information furnished is complete, accurate and true. If Company subsequently determines that any statements regarding Customer's credit are false, incomplete or inaccurate, Company may declare Customer to be in default and may exercise any remedies it has under these Terms and Conditions of Service and at law or in equity.
3. **CUSTOMER RADIO EQUIPMENT** — Company is not responsible for the installation, operation, quality of transmission or maintenance of the equipment. Company reserves the right to change or remove assigned codes and/or telephone numbers when such change is reasonably necessary in the conduct of its business. Customer does not have any proprietary interest in such codes or telephone numbers. Federal and state laws make it illegal for third parties to listen in on service, however complete privacy cannot be guaranteed.
4. **SECURITY DEPOSITS** — Company has the right, in its sole discretion, to require Customer to make a deposit to guarantee payment of Service charges. Customer grants Company a security interest in such deposits, to secure the payment of all sums due thereunder as well as the performance of all other obligations Customer may have to the Company whether now existing or hereafter arising. Upon termination of Service, Company may apply the deposit against any outstanding Service charges of Customer or any other amount owed to Company. Company reserves the right to interrupt services if service appears to have excessive charges or any unusual calling patterns are observed on Customer's account. Such interruption may be done to protect Customer or Company as the Company determines in its sole discretion.
5. **RATES, CHARGES AND PAYMENTS** — Company shall issue invoices for Service on a monthly basis which are due and payable upon receipt. Monthly Access Charges shall be invoiced in advance. Airtime and long-distance charges shall be invoiced in arrears. Customer is responsible to pay Company on a timely basis, for charges for Service payments as set forth on the Company's then-current rate plans, and any modifications thereto. Customer acknowledges that chargeable time for telephone calls originated by a unit begins when a connection is established with Company facilities. Customer accepts responsibility for Airtime charges from invoicing telephone calls to its mobile unit from the time that Customer responds to the call. If Customer disputes any Service charges, Customer must pay entire amount set forth in the invoice by the due date and submit a written explanation within forty-five (45) days from the date on the invoice. If Company determines that an error was made on Customer's invoice, Company shall credit

Nextel Terms and Conditions of Service

Customer's account in the amount of the error. If Customer does not pay the amount in dispute, Company may exercise any remedies it may have for non-payment of Service charges. Company reserves the right to modify any and all elements of the Service charges at any time. Payments which are not received within thirty (30) days from the day of the invoice shall be subject to late payment charges. If Customer does not make payments, such failure shall be a default and Company shall be entitled to exercise any remedies it may have under these Terms and Conditions of Service or at law or in equity.

6. **NONPAYMENT/BREACH** — A late payment charge of 1.5% (or the maximum interest rate permitted by law) per month, may be applied to Customer's account if monthly invoices are not paid by the due date. The later payment charge is applied to the total unpaid balance due and outstanding. The late payment charge is for costs related to the non-timely payment and shall be deemed an interest payment. A charge of \$25.00 will be made by Company for any check or negotiable instrument tendered by Customer and returned unpaid by a financial institution for any reason. Company may demand payment by money order, cashier's check or similarly secure form of payment, at Company's discretion. If Company obtains the service of a collection or repossession agency or an attorney to assist the Company in remedying Customer's breach of any payment obligations, Customer shall be liable for this expense. Customer understands that in the event of nonpayment of charges or any other breach of these Terms and Conditions of Service in addition to any other remedies the Company may have, Company may temporarily or permanently terminate Service to Customer. If Company disconnects the Service, Customer shall be liable to pay a re-connect charge of \$25.00 per unit, in addition to the outstanding Service charges before the Company will reactivate Service. Company reserves the right to modify the terms of service as a precondition to reactivating service.

7. **TAXES** — Customer is responsible for all federal, state and local taxes for fees which are computed in accordance with the appropriate tax laws for Services.

8. **LIMITATION AND CONDITION OF LIABILITY/INDEMNITY** — The Company's sole liability for Service disruption, whether caused by the negligence of the Company or otherwise, is limited to a credit allowance not exceeding an amount equal to the proportionate charge to the Customer for the period of Service disruption. In no event is the company or lessor liable for actual consequential or special damages caused by its negligence or otherwise nor for economic loss, personal injuries or property damages sustained by customer or any third parties. Customer agrees to indemnify, defend and hold Company harmless from any Customer violations of FCC rules and regulations or Customer violation of any statutes, ordinances or laws of any local, state or federal public authority.

9. **NOTICE REGARDING USE OF SERVICE FOR 911 OR OTHER EMERGENCY CALLS** — The Service provider hereunder does not interact with 911 and other emergency services in the same manner as land line telephone service. Depending on the circumstances of a particular call, the Service provided hereunder may not be able to identify your location to emergency services and may not always be connected to the appropriate emergency services provider. Customer agrees to hold company harmless against any and all claims, demands, actions or causes of action (including all actions by third parties) arising out of the use or attempted use of the company's service to access 911 or other emergency services.

10. **NO WARRANTY (SERVICE)** — Company makes no warranties, express or implied, including without limitation, any implied warranty of merchantability or fitness for a particular purpose to customer in connection with its use of the service. In no event shall company be liable for incidental or consequential damages to the full extent the same may be disclaimed by law. Customer acknowledges that service interruptions will occur from time to time and agrees to hold company harmless for all such interruptions.

11. **NO WARRANTY (EQUIPMENT)** — Company makes no warranties or representations of any kind, statutory, expressed or implied, to customer or any other purchaser of equipment activated on the service. Without limiting the foregoing, company specifically makes no express or implied warranties of merchantability or fitness for a particular purpose. Customer hereby waives all other warranties, guarantees, conditions or

i700plus

liabilities, express or implied, arising by law or otherwise. In no event shall company be liable for consequential, special or incidental damages, whether or not occasioned by company negligence and including, without limitation, liability for any loss or damage resulting from the interruption or failure in the operation of any equipment activated on the service. There are no warranties which extend beyond the description contained herein. Customer assumes the entire risk as to the quality and performance of the equipment. If the equipment proves defective, the costs of all necessary servicing and repair will be borne by the customer.

12. NEXTEL BUSINESS NETWORKS -- There is no group call available on the Nextel Business Networks. There is no pooling of Nextel Direct Connect minutes between companies on the Nextel business networks. It is possible that participants on the Nextel Business Network could determine the private identification numbers of customer's units and be able to private call those units. It is also possible that users of customer units could determine the private identification numbers of other Nextel Business Network participants and private call them.

©1999 Nextel Communications, Inc. All rights reserved. Nextel, the Nextel logo, Nextel Direct Connect, and Nextel Business Networks are trademarks and/or service marks of Nextel Communications, Inc.

Motorola, *i700plus*, VibraCall, and Call Alert, are trademarks; and iDEN and Turbo Dial are registered trademarks of Motorola, Inc.

®Reg. U.S. Pat. & Tm. Off.

www.nextel.com

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.

READ THIS INFORMATION BEFORE USING YOUR INTEGRATED MULTI-SERVICE PORTABLE RADIO.

For the safe and efficient operation of your radio, observe these guidelines:

Your radio product contains a transmitter and a receiver. When it is *ON*, it receives and transmits radio frequency (RF) energy. The radio operates in the frequency range of 806 MHz to 870 MHz and employs digital modulation techniques. When you communicate with your radio product, the system handling your call controls the power level at which your radio product transmits. The output power level typically may vary over a range from 0.00024 watts to 0.6 watts.

Exposure To Radio Frequency Energy

Your Motorola Radio Product is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) IEEE. C95. 1-1992
- National Council on Radiation Protection and Measurements (NCRP). Report 86
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- National Radiological Protection Board of the United Kingdom, GS 11, 1988
- Verband Deutscher Elektrotechniker (VDE) DIN-0848
- Department of Health and Welfare Canada. Safety Code 6

To assure optimal radio product performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:

When placing or receiving a phone call, or using the group and private call functions with a Group/Private Speaker OFF (muted speaker icon visible in the display), hold your radio product as you would a telephone. Speak directly into the microphone and position the antenna up and over your shoulder.

When using your radio product as a traditional two-way radio while making group or private calls with the Group/Private Speaker ON (no speaker icon visible in the display), hold the radio product in a vertical position with the microphone one to two inches (2.5 to 5 cm) away from the lips.

For body-worn operation, with or without an earpiece or any other accessory, the antenna should be kept at least one inch (2.5 cm) from the body when transmitting. A Motorola plastic carry holder with a belt clip and a leather carry case are available as accessories to this radio product for body-worn use.



When using any data feature of the radio product, with or without an accessory cable, position the antenna of the radio product at least one inch (2.5 cm) from the body.

DO NOT hold the antenna when the radio is "IN USE". Holding the antenna affects call quality and may cause the radio product to operate at a higher power level than needed.

Interference to Medical and Personal Electronic Devices

Most electronic equipment is shielded from RF energy. However, certain equipment may not be shielded against the RF signals from your radio product.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the radio product more than six inches from the pacemaker when the radio product is turned ON.
- Not carry the radio product in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio product OFF immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some radio products may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your radio product OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Interference to Other Electronic Devices

- RF energy may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or representative to determine if these systems are adequately shielded from external RF energy. Also check with the manufacturer of any equipment that has been added to the vehicle.
- Turn your radio product OFF before boarding any aircraft to prevent possible interference to aircraft systems. Regulations of the United States Federal Communications Commission prohibit use when the plane is airborne. The United

Safety and General Information

States Department of Transportation regulations require you have permission from a crew member to use your radio product while the plane is on the ground.

Safety and General

Use While Driving

Check the laws and regulations on the use of wireless telephones in the area where you drive. Always obey them.

When using the radio product while driving, please:

- Give full attention to driving and to the road
- Use hands-free operation, if available
- Pull off the road and park before making or answering a call if driving conditions so require.



Operational Cautions

Damaged Antennas

Do not use any portable radio product that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

Batteries

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.



Operational Warnings

Potentially Explosive Atmospheres

Turn off your radio product when you are in any area with a potentially explosive atmosphere, unless it is a radio product type especially qualified for use in such areas (for example, Factory Mutual Approved). Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury, or even death.

NOTE: The areas with potentially explosive atmospheres referred to above include fueling areas such as: below decks on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often, but not always posted.

Batteries

Do not replace or charge batteries in a potentially explosive atmosphere. Contact sparking may occur while installing or removing batteries and cause an explosion.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn off your radio product when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

For Vehicles Equipped with an Air Bag

Do NOT place objects, including both installed and portable wireless equipment, in the area over the air bag or in the air bag deployment area. An air bag inflates with great force. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Cleaning Instructions

Clean the external surfaces of the radio product with a damp cloth, using a mild solution of dishwashing detergent and water. Some household cleaners may contain chemicals that could seriously damage the radio product. Avoid the use of any petroleum-based solvent cleaners. Also, avoid applying liquids directly on the radio product.

 
Antenna Considerations

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio product, or result in violation of local agency regulations.

Accessory Safety Information

IMPORTANT: SAVE THESE ACCESSORY SAFETY INSTRUCTIONS

- Before using any battery or battery charger, read all the instructions for and cautionary markings on (1) the battery, (2) the battery charger, which may include a separate wall-mounted power supply or transformer, and (3) the radio product using the battery.
- Do not expose any battery charger to water, rain, or snow as they are designed for indoor or in-vehicle use only.
- Since a battery charger is designed for indoor or in-vehicle use only, do not expose a battery charger to water, rain, or snow.



- To reduce the risk of damage to the cord or plug, pull by the plug rather than the cord when you disconnect the battery charger from the power source outlet.
- Do not operate any battery charger with a damaged cord or plug - replace them immediately.
- Battery chargers may become warm during operation, but not hot. If it becomes hot to the touch, unplug it from the power outlet immediately and discontinue its use.
- Use of a non-recommended attachment to a battery charger may result in a risk of fire, electric shock, or injury to persons.
- Make sure the battery charger power cord is located so that it will not be stepped on, tripped over, or subjected to damage or stress.
- An extension cord should not be used with any battery charger unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure that:
 - The pins on the plug of the extension cord are the same number, size, and shape as those on the plug of the charger.
 - The extension cord is properly wired and in good electrical condition.
 - The cord size is 18AWG for lengths up to 100 feet and 16AWG for lengths up to 150 feet.
- Do not operate any battery charger if it has received a sharp blow, has been dropped, or has been damaged in any way; take it to a qualified service technician.
- Do not disassemble a battery charger; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- Maximum ambient temperature around the power supply or transformer of any battery charger should not exceed 40°C (104°F).
- The output power from the power supply or transformer must not exceed the rating given on the Desktop Dual-Pocket Charger.
- The disconnection from the line voltage is made by unplugging the power supply from the AC receptacle.
- To reduce risk of electric shock, unplug any battery charger from the outlet before attempting any maintenance or cleaning.
- For optimum charging performance, turn off the radio product while charging it in any battery charger.

Warranty Information

NOTE: This Warranty applies within the fifty (50) United States and the District of Columbia

Limited Warranty Motorola Communication Products

I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA, INC. ("MOTOROLA") warrants the MOTOROLA manufactured iDEN Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

iDEN Subscriber Digital Mobile and Portable Units	One (1) Year
Product Accessories	One (1) Year

Rechargeable Batteries will be replaced during the applicable warranty period if:
the battery capacity falls below 80% of rated capacity, or
the battery develops leakage.

MOTOROLA, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment if expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

II. GENERAL PROVISIONS:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product, Repair, replacement or refund of the purchase price, at MOTOROLA'S options, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR

Warranty Information

DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

III. STATE LAW RIGHTS:

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

IV. HOW TO GET WARRANTY SERVICE:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service. You can also call MOTOROLA at 1-800-453-0920 for warranty service location information.

V. WHAT THIS WARRANTY DOES NOT COVER:

- a. Defects or damage resulting from use of the Product in other than its normal and customary manner.
- b. Defects or damage from misuse, accident, water, or neglect.
- c. Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- d. Breakage or damage to antennas unless caused directly by defects in material workmanship.
- e. A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment) which adversely affect performance of the Product or interfere with MOTOROLA'S normal warranty inspection and testing of the Product to verify any warranty claim.
- f. Product which has had the serial number removed or made illegible.
- g. Rechargeable batteries if:
 1. Any of the seals on the battery enclosure or cells are broken or show evidence of tampering.
 2. The damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- h. Freight costs to the repair depot.
- i. A Product which, due to illegal or unauthorized alteration of the software/ firmware in the Product, does not function in accordance with MOTOROLA'S published specifications or the FCC type acceptance labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.

- j. Scratches or other cosmetic damage to Product surfaces that does not effect the operation of the Product.
- k. Normal and customary wear and tear.

VI. PATENT AND SOFTWARE PROVISIONS:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and Motorola will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- a. That MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- b. That MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- c. Should the Product or parts become, or in MOTOROLA'S opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software, such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

Warranty Information

Limited Warranty

NOTE:	This Warranty applies in Singapore and the Philippines.
--------------	---

Motorola Communication Products

I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA warrants the MOTOROLA manufactured iDEN Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

iDEN Subscriber Digital Mobile and Portable Units	One (1) Year
Product Accessories (manufactured by or under license from MOTOROLA)	One (1) Year

Rechargeable Batteries will be replaced during the applicable warranty period if:

the battery capacity falls below 80% of rated capacity, or

the battery develops leakage.

MOTOROLA, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment if expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

II. GENERAL PROVISIONS:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product, Repair, replacement or refund of the purchase price, at MOTOROLA'S options, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN

EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

III. HOW TO GET WARRANTY SERVICE:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service.

IV. WHAT THIS WARRANTY DOES NOT COVER:

- a. Defects or damage resulting from use of the Product in other than its normal and customary manner.
- b. Defects or damage from misuse, accident, water, or neglect.
- c. Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- d. Breakage or damage to antennas unless caused directly by defects in material workmanship.
- e. A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment).
- f. Product which has had the serial number removed or made illegible.
- g. Rechargeable batteries if:
 1. Any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
 2. The damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- h. Freight costs to the repair depot.
- i. A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA'S published specifications or the local type acceptance labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- j. Scratches or other cosmetic damage to Product surfaces that does not effect the operation of the Product.
- k. Normal and customary wear and tear.
- l. Exclusion for defects or damage arising from use of the products in connection with non-MOTOROLA equipment.

V. PATENT AND SOFTWARE PROVISIONS:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a patent, and Motorola will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

www.nextel.com

Warranty Information

- a. That MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- b. That MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- c. Should the Product or parts become, or in MOTOROLA'S opinion be likely to become, the subject of a claim of infringement of a patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or sued in connection with the Product or any parts thereof. In no event shall MOTOROLA be liable for any incidental, special or consequential damages arising from any claim of patent infringement or alleged infringement.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software, such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise or rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.


Patent and Trademark Information

This product is protected under one or more of the following patents:

4817157, 4896361, 4857928, 5041793, 5060294, 5066923, 5134718, 5140156, 5239963, 5257411, 5287387, 5265219, 5289504, 5316168, 5317247, 5338396, 5389927, 5406588, 5424921, 5457376, 5460906, 5551063, 5557079, 5596487, 5615412, 5638403, 5559468, 5469465, 5170413, 5140615, 5519730, 5241544, 5584059, 5574992, 5396656, 5487091, 5533004, 5299199, 5343499, 5369501, 5509031, 5515379, 5528723, 5598417, 5066923, 5241650, 5278833, 5359696, 5548631, 5410632, 5440582, 5457735, 5457818, 5471670, 5477550, 5481537, 5566181, 5229767, 5208804, 5295140, 5381449, 5440590, 5467398, 5490230, 5620242, 5623523, 5655913, 5715240, 5771440, 5854578, 5675281

Additional patents are pending.

© 1999 Nextel Communications, Inc. All rights reserved. Nextel, the Nextel logo, Nextel Direct Connect, and Nextel Business Networks are trademarks and/or service marks of Nextel Communications, Inc. www.nextel.com.

 Motorola, iDEN, Call Alert, *i700plus*, TurboDial, VibraCall, and Message Mail are trademarks or registered trademarks of Motorola, Inc.

®Reg. U.S. Pat. & Tm. Off.

All other trademarks mentioned in this manual are trademarks of their respective companies.

Important!

Be sure to read "Safety and General Information" on page 87 before using your Nextel phone.

© Copyright 1999, Motorola, Inc. All rights reserved.

Index

A

Accessing New Pages **50**
Accessories **72**
Accessory Safety Information **92**
Activating Your
 Greeting Schedule **37**
Activating Your *i700plus* **12**
Active Line Indicator **13**
Additional Phone Services **43**
Alternate Line **48**
Alternate Lines Service **47**
Attaching the Battery **10**
Audio Adapter **78**
Automatic Redial **23**

B

Batteries **9**
Battery Charging Status **11**
Battery Strength Indicator Icon **13**
Business Networks **54**

C

Call Alert Queuing **58**
Call Forward Indicator **13**
Call Forwarding **45**
Call Hold **44**
Call Waiting **43**
Caller ID **46**
change the case of the letter **18**
Changing the Display Language **61**
Changing Your Password **32**
Charge Strength **11**
Charging the Battery **10, 72**
Choosing Order to Play Unheard Messages **31**
Cigarette Lighter Adapter **74**
coverage areas **12**
Create/Modify Message Forwarding Number **39**
Creating Group Lists **38**
Customer Care **71, 83**
Customizing the *i700plus* **61**
Customizing Your Voice Mail Setup **32**

D

Dash Mount Holder **79**

Delayed Forwarding
 of messages **39**
Deleting a Group List **39**
Desktop Dual-Pocket Charger **75**
Detaching the Battery **10**
Dialing **22**
Direct Dial **22**
Direct ProtectSM insurance **71**
Display Icons **13**
Displaying the Caller's Name **46**
Displaying Your Phone Number **22**
Displaying Your Private ID **55**

E

Editing Stored List Entries **19**
E-Mail Paging **52**
Emergency **24**
Emergency/Non-Emergency Dial **23**
Enabling/Disabling Message Forwarding **40**
Enabling/Disabling Pager Notification **41**
Ending a Call **24**
Entering the Private ID **56**
Erasing List Entries **20**
retrieve deleted messages **31**

F

Forwarding
 modify type **40**
Future Delivery **35**

G

Getting Started **9, 21, 54**
Greetings **36**
Group Calls **58**
Group Lists **35, 38**
Group Mode **14, 16**
Group/Prvt Vibe **64**
Group-Silent Programming **60**

H

Hands-Free Car Kit **81**

I

iDEN Organizer **17**
IMEI number **83**

Immediate Forwarding **39**

L

Last 10 Numbers Received/Sent **25**

Limiting Notification to Specific Times **42**

Listening Options **29**

 Quick Reference List **30**

Logging Into Voice Mail **28**

M

Mail Vibe **64**

Mailbox Numbers **34**

Making Calls From the Stored List **22**

Making Phone Calls **22**

menu options **14**

Menus **14**

Message

 Delivery Status

 checking **52**

message options **30**

Missed Call Indicator **24**

Mode **14**

Model number **83**

Modes and Menus **14**

Modify Forwarding Type **40**

Modifying a Group List **38**

More Information Indicator **13**

N

Name Search **23**

Net Mode **14**

New Message Indicators **27**

New Text and Numeric Paging Flashing Indicator **13**

Nextel Business Networks **54, 71**

Nextel Direct Connect **14, 54**

Nextel Nextday Accessories **71**

Nextel NextdaySM Accessories **17**

Nextel Online Internet Services **14**

Nextel Terms and Conditions of Service **85**

Nextel Voice Mail Service **26**

Non-Emergency **24**

Notification **50**

Notification of New Pages **50**

Notification of Non-Delivery **35**

Numeric Paging **51**

O

Operator Assisted

 Paging **51**

Ordering Information **71**

P

Pager Notification **41**

Pages

 accessing **50**

 Viewing **50**

Paging

 E-mail **52**

 Numeric **49, 51**

 Operator Assisted **51**

 Web **51**

password **27**

Patent and Trademark Information **99**

Per-Call Blocking **47**

Per-Line Blocking **47**

Phone Calls **21**

Phone Mode **14, 21**

Phone Status **12**

Phone Vibrate **64**

Phone Vibrate/Ring **64**

Placing/Clearing a Call Alert in the Queue **58**

Privacy **46**

Private **35**

Private Calls **55**

Private ID

 Programming Your Own **55**

Private IDs

 Quickstore **57**

Private Mode **14, 16**

Private/Group Mode **54**

Private/Group Speaker Indicator **13**

Programming Menus **65**

Programming Menus Shortcut and Options **66**

Programming Your Own Phone Number **21**

Q

Questions? **vi**

Quick Guide to *i700plus* Functions **15**

Quick Reference Card **83**

Quickstore of Phone Numbers **25**

Quickstore of Private IDs **57**

-
- R**
- Receiving a Group Call **59**
 - Receiving Calls on Your Alternate Line **48**
 - Receiving Private Calls **57**
 - Receiving/Ending a Phone Call **24**
 - Receiving/Responding to a Call Alert **57**
 - Recording and Sending A Message **34**
 - Recording Your Active Greeting **33**
 - Recording Your Name **32**
 - Redial **23**
 - Responding to a Call Alert within the Queue **58**
 - Retrieving Missed Calls **24**
 - Reviewing/Storing Received Calls **25**
 - Reviewing/Storing Sent Calls **25**
- S**
- Safety and General Information **88**
 - Sample Greeting **33**
 - Saving and Deleting Messages **31**
 - Scroll **22**
 - Selecting a Name from a Stored List **56**
 - Selecting a Ring Style **63**
 - Sending a Call Alert **57**
 - Sending a Page **49, 51**
 - Setting the Ringer Volume **63**
 - Setting Up Your Voice Mailbox **26**
 - Signal Strength Indicator **13**
 - silence incoming alerts and voice **60**
 - Silent Forwarding **39**
 - Special Delivery Options **35**
 - Speed Dial **23**
 - Status Light **12**
 - Status Light Indicator **12**
 - Status Messages **83**
 - status of your connection **12**
 - stored list **17**
 - Storing Names and Numbers **17**
 - Swivel Belt Clip **80**
- T**
- Talkgroup
 - Naming **59**
 - Three-Way Calling **45**
 - Time and Date Charts **41**
 - Transferring Calls to Voice Mail **46**
- Travel Charger **10, 72**
 - Travel Chargers **72**
 - Turbo Dial **23**
 - Turning Call Waiting Off **44**
 - Turning Your *i700plus* On/Off **11**
 - two-way radio **54**
- U**
- Urgent **35**
 - Using the Private/Group Speaker **55**
 - Using Your Phone As A Modem **53**
- V**
- VibraCall **64**
 - VibraCall Settings **64**
 - VibraCall™ Indicator **13**
 - Vibrate Alert **64**
 - View Page Immediately **50**
 - Viewing a Page **50**
 - Voice Mail
 - 24-hour Military Time Clock **41**
 - Changing Your Password **32**
 - Indicator **13**
 - Voice Mail Features
 - Advanced **34**
 - Basic **26**
 - Voice Mail Menus **28**
 - Voice Mailbox **26**
- W**
- Warranty Information **93**
 - Web Paging **51**